

FAQ

Opening and Replacing Batteries for Nice FLO and FLO-RS Remotes

Step One

Press down on the bottom of the remote, as shown to the right.



Step Two

The remote should flip open from the bottom, revealing the battery. Gently remove the front cover from the remote. (See left)

Step Three

You can now change the battery of your remote, as well as program the remote using the dipswitches directly above the battery (on FLO1, FLO2 and FLO4 remotes) (See right)



Notes

- *FLO-R-S (Rolling Code Remotes) are opened in the same manner as FLO remotes.*
- *This guide applies to the following remotes:
FLO1, FLO2, FLO4,
FLO2R-M, FLO4R-M, FLO1R-S, FLO2R-S,
FLO4R-S, FLO1R-SC, FLO2R-SC, FLO4R-SC*
- *The FLO and FLO-R-S remotes use **LR23A** batteries*