


INSTRUCTIONS AND ASSEMBLY OF HF DIP SWITCH PROGRAMMER

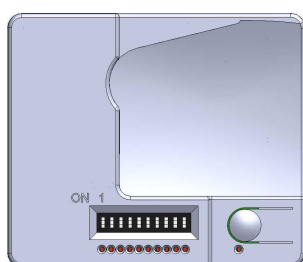

**Reference
12-0122-EN**

PRODUCT PRESENTATION

The HF DIP SWITCH PROGRAMMER is a device used to quickly programme DIP SWITCH codes for one or more remote controls. The concept is simple: you toggle the HF DIP SWITCH PROGRAMMER switches to create a DIP SWITCH code that will be written to remote control(s) that you wish to program. The DIP SWITCH code for your remote controls will then be saved by your receiver when in detection mode.

Some important points to remember:

- The HF DIP SWITCH PROGRAMMER is a device used to independently program one or more remote controls.
- The HF DIP SWITCH PROGRAMMER's "Copy" mode provides on the fly copies of as many remote controls as you desire.
- The HF DIP SWITCH PROGRAMMER is compatible with **07-0106-EN** (EEN-REC4) receivers.
- The HF DIP SWITCH PROGRAMMER includes a selection of 1022 different DIP SWITCH codes for use with your remote controls.
- The HF DIP SWITCH PROGRAMMER runs on two CR2032 batteries, available in stores.

CONTENTS

PRODUCT PRESENTATION	1
CONTENTS	2
PRESENTATION OF HF DIP SWITCH PROGRAMMER	3
1) HF DIP SWITCH PROGRAMMER DESCRIPTION	3
2) HF DIP SWITCH PROGRAMMER GENERAL OPERATIONS	3
FEATURES	4
1) WRITE	4
2) DELETE	4
3) READ	4
4) COPY	4
5) TURN OFF DEVICE	4
CHANGING BATTERIES	5
1) WHEN SHOULD I CHANGE THE BATTERIES?	5
2) HOW DO I CHANGE THE BATTERIES?	5
PRODUCT SIZE	6
CERTIFICATE OF CONFORMITY	7
NOTES	8


PRESENTATION OF HF DIP SWITCH PROGRAMMER

1) HF DIP SWITCH PROGRAMMER DESCRIPTION

PUSH ON/OFF

SWITCHES

SETTINGS LEDs

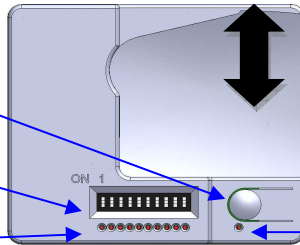

POSITIONING THE REMOTE CONTROL

LED LIGHTING

2) HF DIP SWITCH PROGRAMMER GENERAL OPERATIONS

1 Compatible remote controls

NO




YES



Only those produced after 2014


Example

2 Write DIP SWITCH code

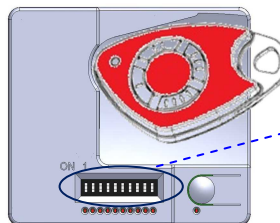


12-0122-EN

ON

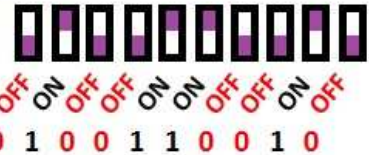

3 DIP SWITCH code detected by receiver

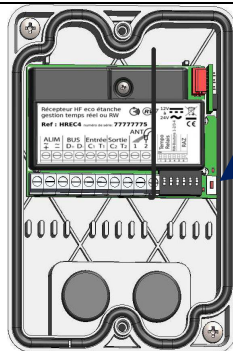

07-0106-EN
(see receiver instructions)

1. Press detection button
2. Remote control detects DIP SWITCH code



4 Fitting for all remote controls with DIP SWITCH code



0100110..

0100110..

0100110..



FEATURES

1) WRITE

1	2	3	4
Set switches	Turn on the DIP SWITCH programmer	Set the remote control on the DIP SWITCH programmer	Confirm programming
<p>Example</p> <p>ON</p> <p>OFF ON OFF OFF ON ON OFF OFF ON OFF</p> <p>0 1 0 0 1 1 0 0 1 0</p>			

2) DELETE

1	2	3	4
Set all switches to ON	Turn on the DIP SWITCH programmer	Set the remote control on the DIP SWITCH programmer	Confirmation delete
<p>ON</p>			

3) READ

1	2	3	4
Set all switches to OFF	Turn on the DIP SWITCH programmer	Set the remote control on the DIP SWITCH programmer	The LEDs show the DIP SWITCH code programmed earlier
<p>ON</p>			<p>0 1 0 0 1 1 0 0 1 0</p>

4) COPY

1	2	3	4
Start programmer in "READ" (the copied code is displayed)	Press and hold the DIP SWITCH programmer power button for 3 seconds	3 beeps confirm launch of "COPY" mode	One by one, set your remote controls on the DIP SWITCH programmer
<p>READ mode</p> <p>DIP SWITCH code to copy</p>	<p>3 sec</p>	<p>COPY mode</p>	

5) TURN OFF DEVICE

There are three ways to turn off the device

<p>Press power on button</p>	<p>Toggle switch</p>	<p>Automatically powers down after 10 seconds without use</p> <p>10 sec</p>	<p>Confirm power off</p>
------------------------------	----------------------	--	--------------------------


CHANGING BATTERIES

1) WHEN SHOULD I CHANGE THE BATTERIES?

Battery level

1

Press power on button

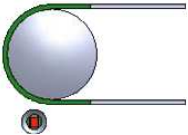

2

The settings LEDs flash and show the battery charge levels



Changing batteries


NO

NEW BATTERIES NEEDED

2) HOW DO I CHANGE THE BATTERIES?

The following diagram shows you how to change the batteries. **CR2032** batteries are available in most stores.


Make sure that the batteries are positioned correctly as shown.

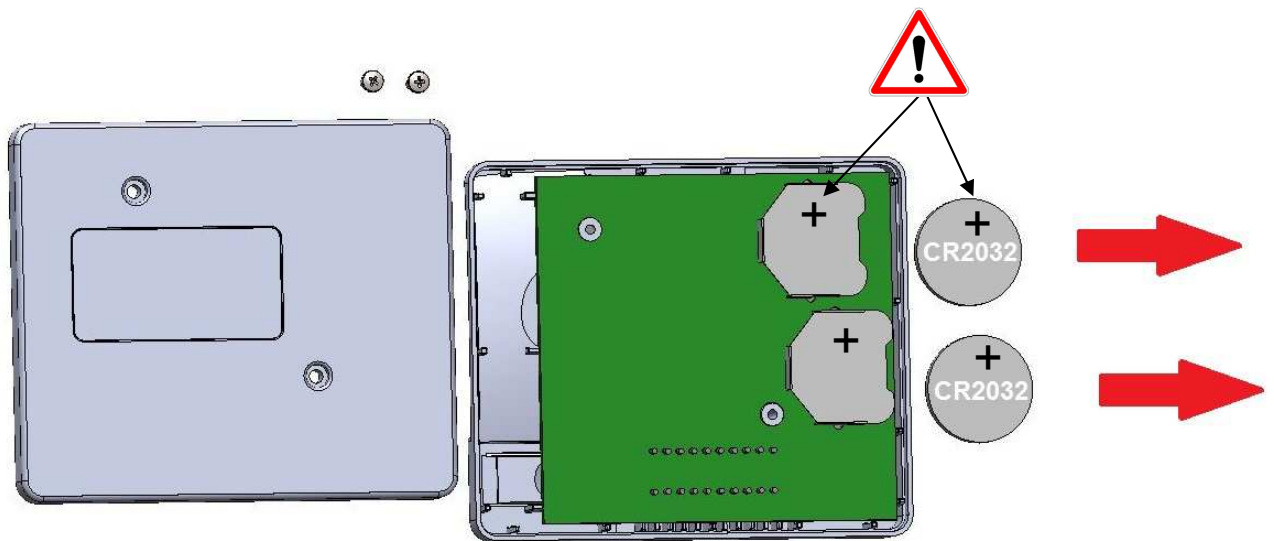

When removing the batteries, take care not to damage the electronic circuit that houses them, especially if using a screwdriver.

The warranty is void if damaged.

PRODUCT SIZE

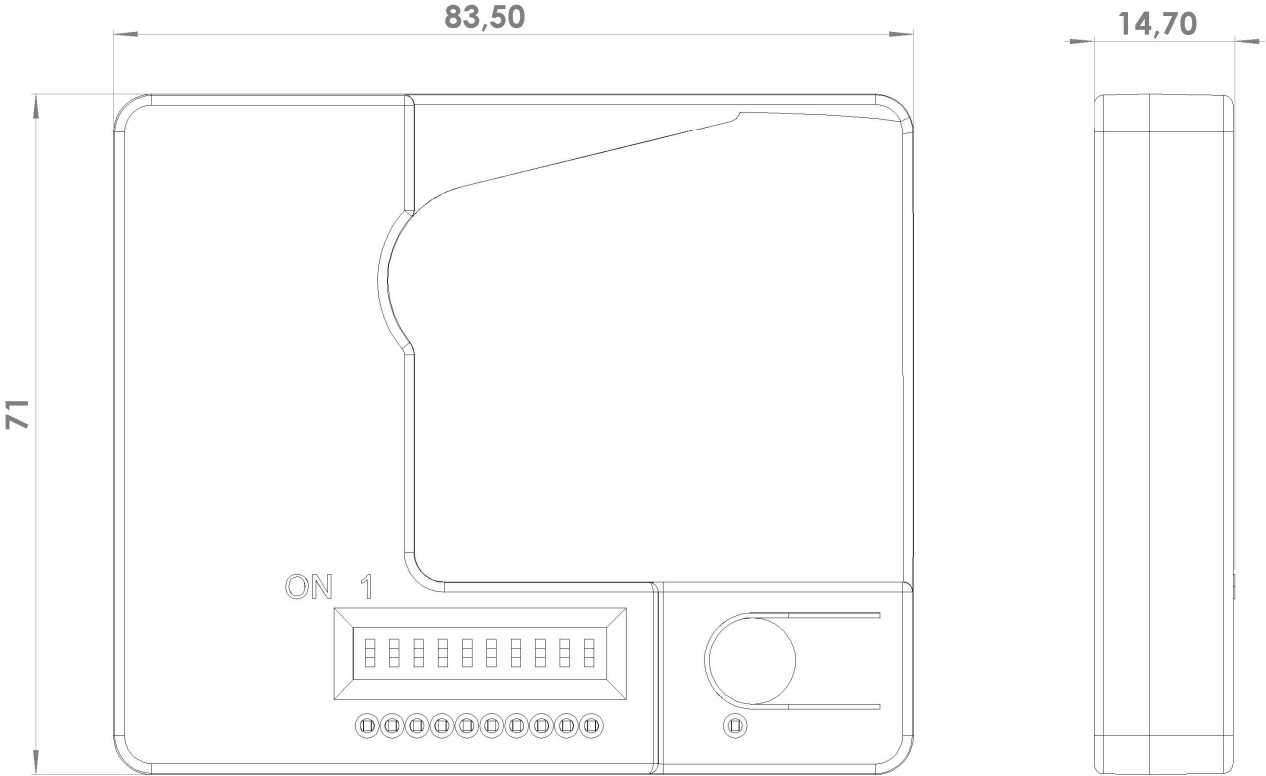

NOTES

Example

Remote Control no.	SW	1	2	3	4	5	6	7	8	9	10	Comment
1234567890	ON	x		x		x		x		x		Mr Smith – A302 Residence: Sunny Meadows
	OFF		x		x		x		x		x	

Remote Control no.	SW	1	2	3	4	5	6	7	8	9	10	Comment
	ON											
	OFF											
	ON											
	OFF											
	ON											
	OFF											
	ON											
	OFF											
	ON											
	OFF											
	ON											
	OFF											
	ON											
	OFF											
	ON											
	OFF											
	ON											
	OFF											
	ON											
	OFF											
	ON											
	OFF											