

THE HEAT CONTROLLER RADIATOR THERMOSTAT



Quick Start Guide



 **FIBARO**[®]
HOME INTELLIGENCE



Scan the code to
read the manual

Support

If you need help configuring FIBARO The Heat Controller, follow our guides and technical manuals available at: manuals.fibaro.com/en/hk-heat-controller

 
Package Contents

Every FIBARO The Heat Controller has a unique HomeKit Setup Code. You will find the setup code on back cover of the Quick Start Guide.

Quick Start Guide, Quick Manuals, Warranty Terms



Device



Temperature sensor (optional)

 


Adapters. Depending on type of your thermostatic valve:

Maintenance key



M30 x 1.5



Proceed normally

 


Danfoss RTD-N



Use adapter

+




Danfoss RA-N




Use adapter

 +



FIBARO app

Download FIBARO application from the App Store.

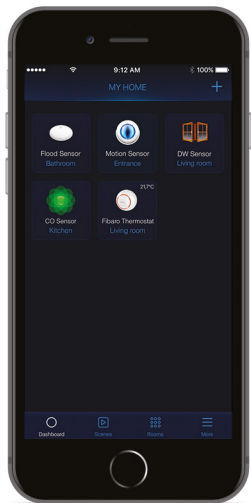

homekit.fibaro.com/app



First launch

Step 1

Connect the charger to the micro-USB port to charge the device

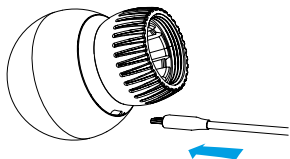


Fig. 1

Step 2

Disconnect the charger when the LED ring pulses green (device fully charged)

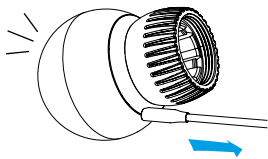


Fig. 2

Step 3

Dismount your current thermostatic head

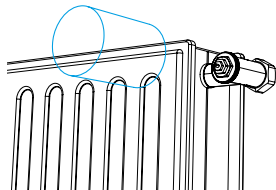


Fig. 3

Step 4

Depending on type of your valve proceed normally or use adapter

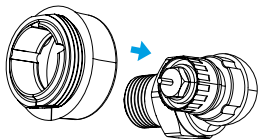


Fig. 4

First launch

Step 5

Mount the device on the valve and tighten it by turning the cap clockwise

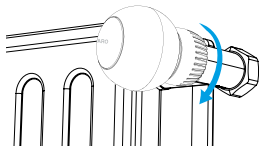


Fig. 5

Step 6

Use the included key to click the button

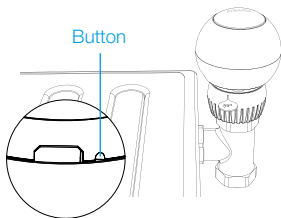


Fig. 6

Step 7

Open the FIBARO app and tap Add accessory icon. Application will guide you through the pairing process



Fig. 7

! If you have already set up another accessory tap the + icon



Resetting The Heat Controller to factory defaults

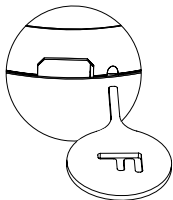


Fig. 8

1. Use the included key to press and hold the button. When the LED ring glows yellow, release the button
2. Click the button again immediately to confirm
3. The device will reset to factory defaults and will be put in Standby Mode. Click the button to activate it again

Sensor pairing

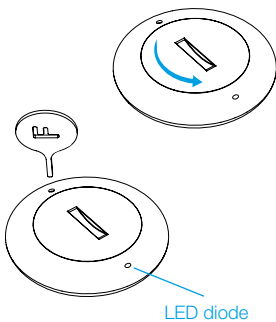


Fig. 9

1. Use a coin to open the battery cover by turning it counter-clockwise
2. Remove the sticker underneath the battery. Use coin again to close the battery cover
3. Press and hold the button on The Heat Controller. When the LED ring glows blue, release the button and click again immediately to confirm
4. Click the button on the Temperature Sensor, the LED diode will start blinking blue
5. The LED ring on The Heat Controller, will blink green 5 times if the connection was successful



HomeKit Setup Code is needed to securely add accessory to your home. You may need it in case of re-pairing. Remember to keep it in safe place. Nobody but you has a copy. FIBARO cannot recover the HomeKit setup code for you.

Room:

Write down the location of the device.