

INSTRUCTION MANUAL

# SMOKE SENSOR

— FIBARO SYSTEM —



## Technical support

 
Should you need any assistance in connecting or configuring your Home Center, please use our guides and technical presentations which can be found on our website:

**<http://www.fibaro.com/en/support>**

## Functional features



Smoke sensor



Temperature sensor



Signal alarm




Light alarm


## Download FIBARO app for smartphone



## Start the device

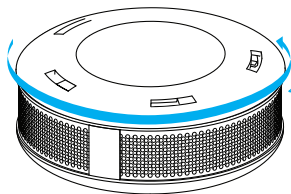

**STEP 1**  
Twist and open the casing.

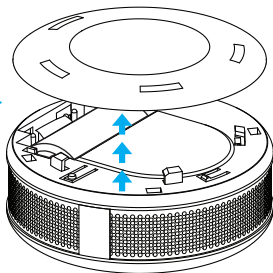


**STEP 2**  
Take off the casing.

## Start the device

### STEP 3

Remove the battery blocker  
"I'm ready".

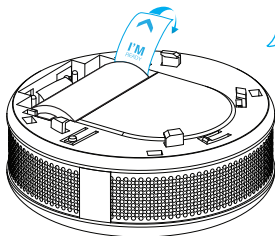

### STEP 4

Check if the battery  
is placed correctly.


Beep!

You will hear an alarm  
signal while  
the LED diode blinks red.

## Start the device

### STEP 5

Close the casing.

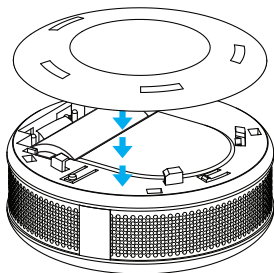

It's not possible to close the device without the battery.

## Your Smoke Sensor is ready to be added to the Home Center.

Smoke Sensor must be in range of the Home Center because it requires  
a direct communication with the controller.





## Start inclusion mode

### STEP 6

Start your FIBARO application.  
Go to Settings.



## Start inclusion mode

**STEP 7**


Press "add device".



**STEP 8**

Press "Next".


Inclusion mode has been launched

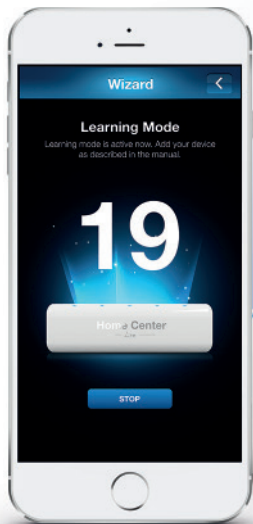


## Add your device

### STEP 9

Quickly, triple click the button in order to add your device to the system.

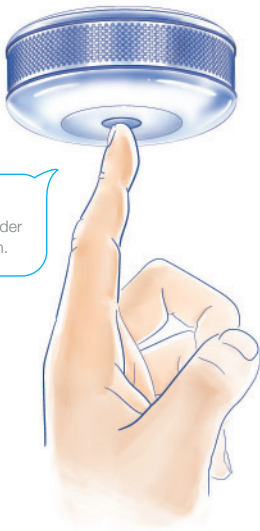


## Processing your configurations

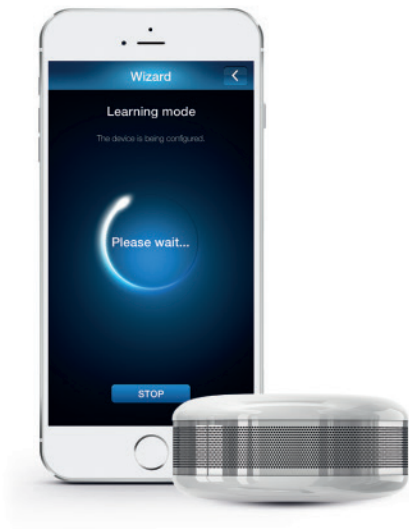

## Wake up the device



Sometimes waking up the device is not required so it will be omitted automatically.

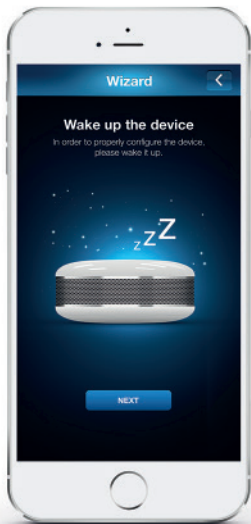

**STEP 10**  
Press the button in order to wake up the device.



## The device has been added



### STEP 11

Name the device and assign it to the room.



## Network range test

It is recommended to check if the device's destination is in range of your Home Center.



### STEP 12a

Hold the button for 3 seconds.

You should hear a short signal while LED diode blinks white.

### STEP 12b

Release the button.



## Network range test



### STEP 13

Press the button when the indicator glow pink.

The quality of the network range will be indicated by different colours of the LED diode.

### STEP 14

Press the button in order to leave testing mode.

## The indicator colour signaling the quality of the network



Direct communication



Routed communication



Limited communication




No signal! The device will not work correctly!



## Installation

During the installation it is recommended to wake up the device.

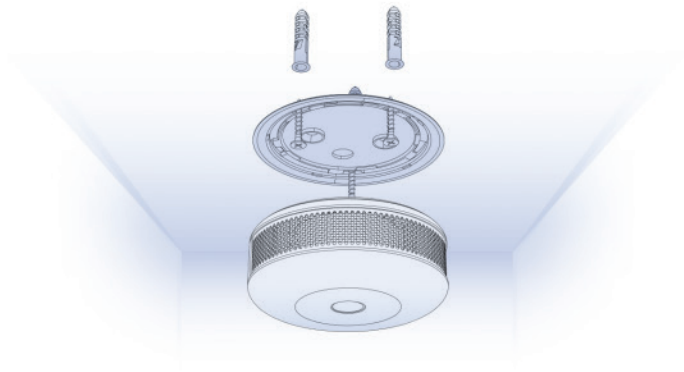

1. It is recommended to install the Smoke Sensor in all spaces that are in danger of fire as well as the corridors between them.
2. Minimum distance:
  - From walls and other objects: 40 cm,
  - From lightning system: 50 cm.
  - From air conditioners: 1,5 m.
3. FIBARO Smoke Sensor should be installed in the tallest space of the room.
4. The device should not be installed in draft places, in location with a natural smoke or steam ( e.g. above the oven and kettle) as well as in well lightened spaces.

## Alarm and information signal



### **Fire**

Three beeps every 1.5 seconds and red light alarm.



### **Low battery level**

A beep every 50 seconds and yellow light alarm.



### **Damage**

A beep every 50 seconds and a light alarm.



[www.fibaro.com](http://www.fibaro.com)