


NEW ANEMOMETER

Wind speed sensor to be used in conjunction with SEAV electronic control units for sun blinds.


TECHNICAL DATA

- Contact capacity: 200 mA 100VDC
- Contact closing (pulse): Once x revolution
- Connection cable: outdoor use 2 x 2.5 mm²
- Connection cable length: (AWG 12-26) 4 m Max.
- Working temperature: -10÷60°C
- Packaging dimensions: 240x185x110 mm
- Container: PC UL94V-0 (IP54)


EXPLODED DIAGRAM OF MECHANICAL PARTS:

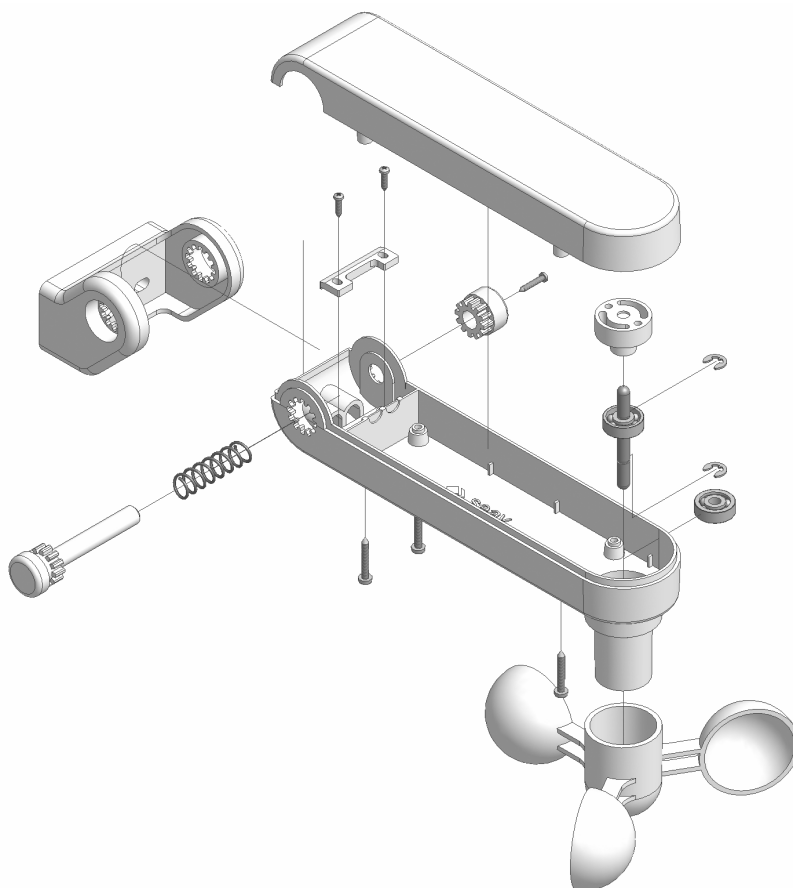


CONNECTION CABLE INSTALLATION:

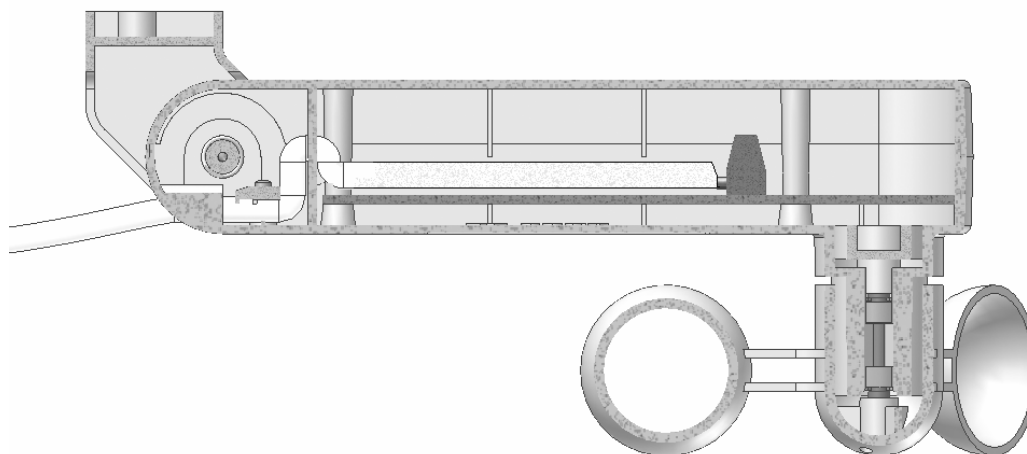

HORIZONTAL ANEMOMETER INSTALLATION:

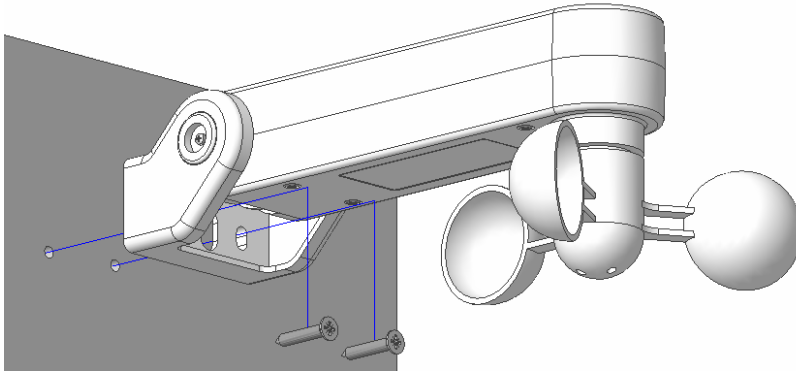

VERTICAL ANEMOMETER INSTALLATION:

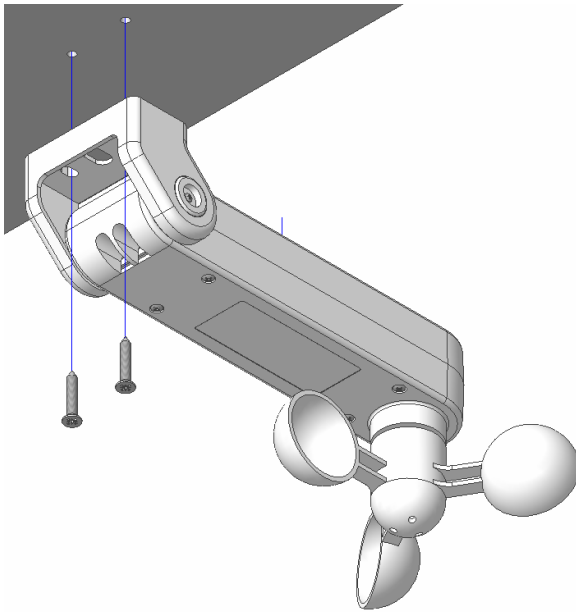

FOR THE INSTALLER - IMPORTANT

- The fixing of the connection cable must be secured using the cable clamp supplied with the product.
- At the time of installation, the anemometer must be handled with care, making sure you have assembled its components correctly.
- It is very important that you decide on the exact position of the device so that it is affected by the wind in the same way as the sun blind.
- All operations requiring the opening of the casing (such as installation, programming and repair, etc.) must be carried out by skilled staff only.

CE