

XK3-DEM

Programming Mode

1. Power keypad on. LED illuminate **blue** for 3 seconds and buzzer sounds for 3 seconds.
2. Press ★, LED flashes **orange**, **Master code #** (Default code 888888.)
3. LED illuminates **orange** constantly showing programming mode is active.

To Exit programming mode press ★

Changing the Master Code

1. Enter programming mode
2. Type 0
3. Enter code (4-8 digits) followed by #
4. Repeat code followed by #, LED will flash **green** twice and sounder will beep twice.
5. LED illuminates **orange** constantly showing programming mode is active.
6. Type ★ to exit programming mode

Adding User Code

1. Enter programming mode
2. Enter 11
3. Select User Slot (1-999) followed by #
4. Select relay (1 or 2) followed by #
5. Enter Pin Code (1-8 digits) followed by #, LED will light **green** briefly

Door release - code must be typed from standby mode followed by #

Change Relay Time

1. Enter programming mode.
2. Press 3
3. Choose relay (1-2)
4. Type value 1-300. Default is 5 seconds. (1=50mS. 0=Latching/Toggle.)
5. Repeat code followed by #, LED will flash **green** twice and sounder will beep twice.

Delete User Code

1. Enter programming mode
2. Enter 2
3. Choose User ID followed by #
4. LED will flash **green** to confirm
- 5.

Delete All User Codes

1. Enter programming mode
2. Enter 2
3. Enter 00000000 followed by #
4. LED will flash **green** to confirm

Restore Master Code to Default

1. Remove power from the keypad
2. Press and hold ★ power on the keypad
3. The sounder will beep four times and **green** LED will flash four times.

No user codes will be erased. Only the master code and settings will be reset.