

ax:s ACCESS CONTROL

AX290KA USER MANUAL




CE FC RoHS 

System Components



Proximity and Keypad Reader

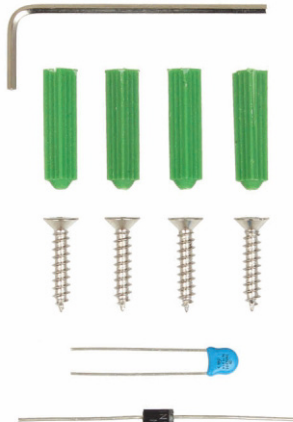

- 1 x Hex Key
- 4 x Plastic wall plug
- 4 x Countersunk screws
- 1 x Diode and 1 x Capacitor


Contents

Installation.....	4
Wiring Example	5
Advanced Programming Guide	
How to set the length of the master Pin.....	6
How to set-up Access Pin Number and Tags	6-7
How to set-up Tags in batches	7-8
Deleting Access Pin or Tag	8
Changing Programming Pin	9
Clear all Pin and Tag Data	9
Default to Factory Settings	10
Lock 1 Output Operating Time.....	10
Enable & Disable backlight.....	11
Enable "Buzzer" Function	11
Enable 'Tamper Alarm' facility	12
Access Pin Number for Lock 2 Output	12
Deleting Access Pin for Lock 2	13
Lock Output Operating Time for Lock 2 Output.....	13
System setup record	14-15
User Guide	16
Technical Specification	16

Installation




Release hex screw from the bottom of the keypad

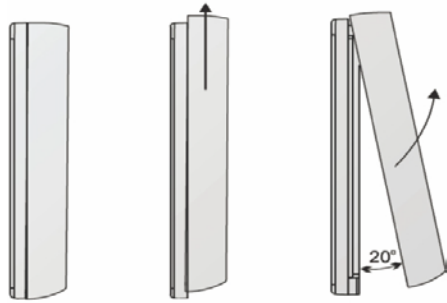

(Side View)


Push the keypad up to release from mount plate

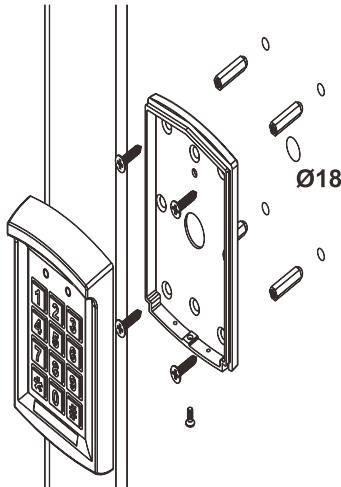







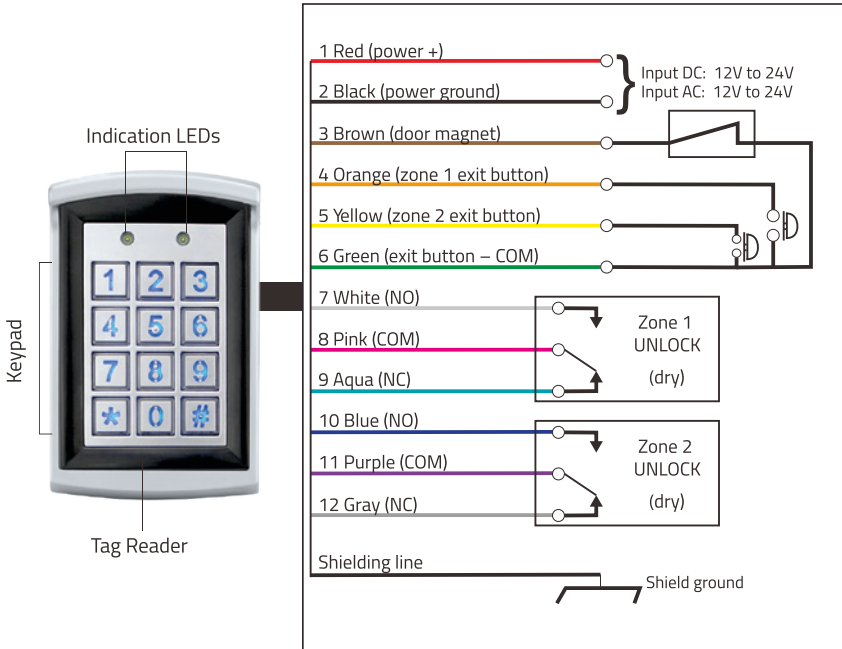



Thread system cable through the cable entry hole then make the system connections (as per the wiring diagram), mount the bracket to the surface and slide the keypad to the mountplate, re-fit the hex screw to secure into position.

Note: if using more than one keypad, ensure that the keypads are mounted a minimum 185cm apart




 





Wiring Example



How to set-up Access Pin Number and Tags

 


 








Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2	Enter a starting location number 	 Double Tone
3	 Enter a 4 digit pin (1234 not be used)	 Long Tone
4	 Present the tags	 Tone
5	 To end programming	

How to set the length of the master Pin.


 

 










Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3		 Long Tone
4	Enter number of digital 2-6	 Long Tone
5	 To end programming	

Note: When the length of the master code is changed, all existing Pin and Tag will be deleted.

How to set-up Access Pin Number















Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3		 Long Tone
4	Enter a starting location number 	 Double Tone
5	 Enter a 4 digit pin <small>(1234 not be used)</small>	 Long Tone
6	 To end programming	

How to set-up Tags in batches (Normal EM125KHz cards)

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3		 Long Tone
4	Enter a starting unused location number * 	 Long Tone
5	 Enter 3-digit number as quantity of tags to be registered	 Tone
6	 Present all the tags one by one	 Tone
7	All tags will be auto register  To end programming	









*Each tag will use a location number (the locations must)

How to set-up Tags in batches (Tags in consecutive numbers)






 




Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3		 Long Tone
4	Enter an unused location number* 	 Long Tone
5	 Enter 3-digit number as quantity of tags to be registered	 Tone
6	 Present the tag with the lowest serial number	 Tone
7	All other batch tags will auto register  To end programming	

*Each tag will use up a location number


Deleting Access Pin or Tag

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2	Enter the location number of tag/pin 	
3	 To delete	
4	 To end programming	








 
Changing Programming Pin

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3	 Enter new 4 digit programming pin	
4	 Re-enter new 4 digit programming pin	 Long Tone
5	 To end programming	

 


 




Note; To access keypad's programming mode, the 4 digit programming code is entered in twice

If forgot the password, turn off the power, press and hold button , connect power again until Bi-sound is heard, the password will be reset to default one 1234




 




Clear all Pin and Tag Data

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3		 Long Tone
4	 To end programming	

Default to Factory Settings


 


Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3		 Long Tone
4	 To end programming	

Lock 1 Output Operating Time

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3	Enter number of seconds 00 or 1-99 	 Long Tone
4	 To end programming	





I.e.If setting lock-time as 00 mean, Swipe card or input password once open the door, swipe card or input password again close the door.

Enable & Disable backlight

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	
2	* 2	
3	0 2 To enable 0 1 To disable	
4	# # To end programming	










 Default: Enabled the backlight

Enable 'Buzzer' Function

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	
2	* 2	
3	0 3 To enable 0 4 To disable	
4	# # To end programming	













*Once the "Buzzer" function is disabled, keypad operation becomes mute.

Enable 'Tamper Alarm' facility




 






Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3	 To enable  To disable	 Long Tone
4	 To end programming	

Tamper alarm activates the keypad's internal buzzer and 'door bell' output if the light sensor is exposed




 




Access Pin Number for Lock 2 Output

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3		 Long Tone
4	Enter an unused location number 	 Double Tone
5	 Enter a 4 digit pin <small>(1234 should not be used)</small>	 Long Tone
6	 To end programming	

Deleting Access Pin for Lock 2

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3	Enter the location number of pin 	
4	 To delete	
5	 To end programming	

Lock Output Operating Time for Lock 2 Output

Step Number	Action	Keypad Indication
1	Enter Programming 	 Long Tone
2		
3	Enter number of seconds 00 or 01-99 	 Long Tone
4	 To end programming	

I.e.If setting lock-time as 00 mean, Swipe card or input password once open the door, swipe card or input password again close the door.

User Guide

To release Lock 1

 
(A)
Enter a programmed
Access Pin number



(B)
Present a
registered tag



To access programming mode



Technical Specification

DC input	12 - 24volts
AC input	12 - 24volts
Standby current	80mA
Operating current (without lock)	110mA

Working temperature	-20c to +50c
Reader frequency	125KHz
IP rating	65
Dimension	120 x 76 x 28mm