



How to program a new TX4UNIS remote into Chamberlain Liftmaster CB11 swing gate control board which uses the 433Mhz radio frequency module.


1. Take the new TX4UNIS remote and slide the cover down to expose the four buttons. Press and hold the left and right hand buttons together and the white LED is flashing. Keep holding until the LED stays on constant and then let go. Now press the top button on the remote once and the LED flashes. Press the top button a second time and the LED flashes again. Now press the bottom button once and the LED goes out.

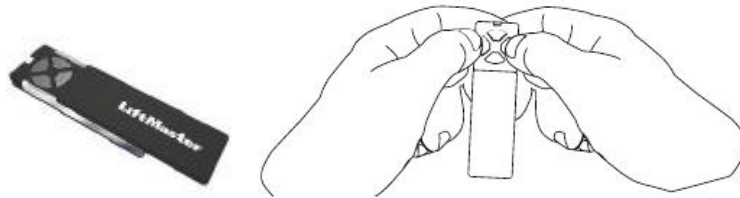

2. Locate the orange Learn button CH1 on the CB11 logic board. Press the CH1 button once and the red LED comes on.

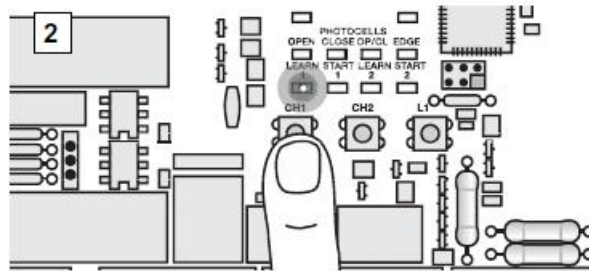

3. Press & hold the top button on the remote control, for 3 seconds, and the LEDs light will flash. Now let go of the remote control button, LEDs will go out and then back on again, and the remote is ready to use.

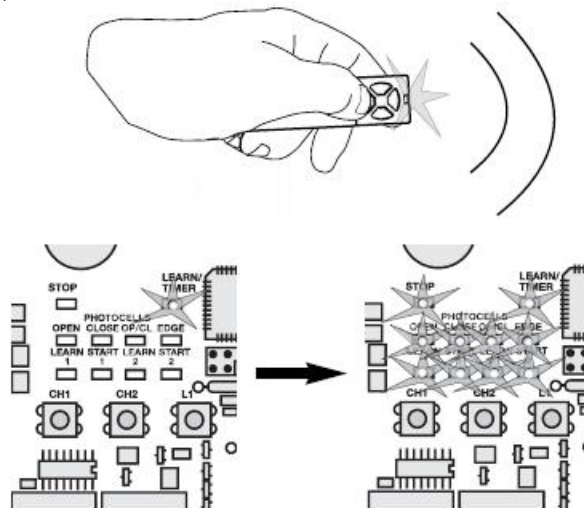

To delete all remote control codes. Press & hold the CH1 button until the red LED goes out, then let go. (Approximately 25 seconds).