


SPIN

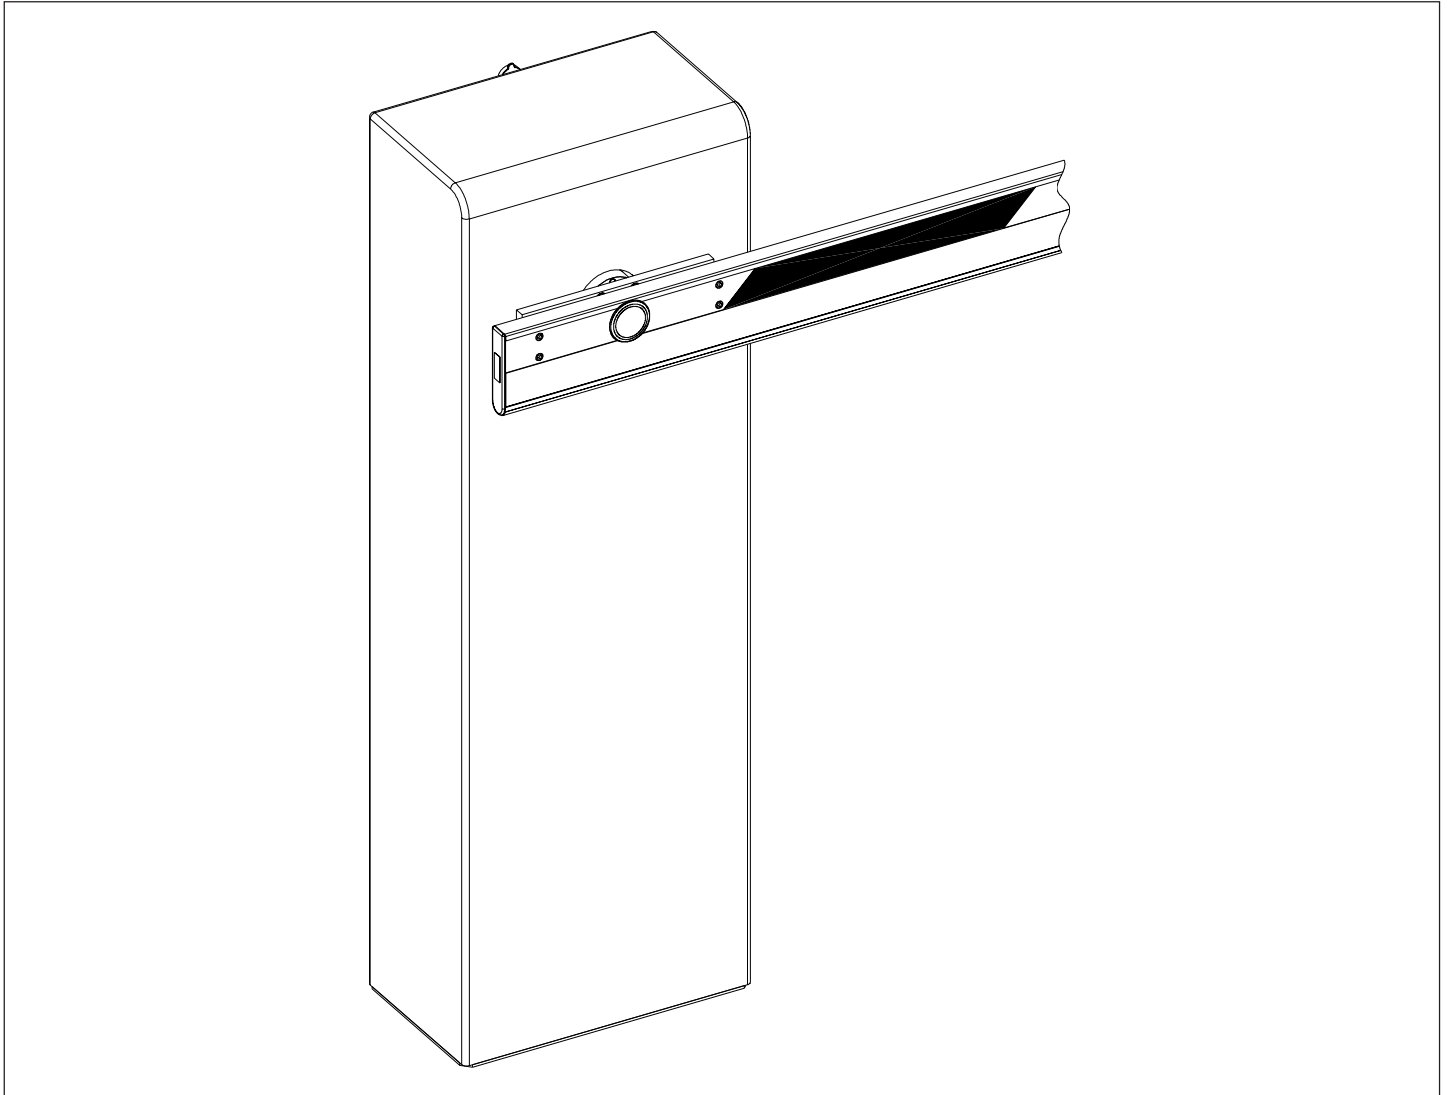

GENIUS[®]

**COMPANY
WITH QUALITY SYSTEM
CERTIFIED BY DNV
=ISO 9001/2000=**



AVVERTENZE PER L'INSTALLATORE

OBBLIGHI GENERALI PER LA SICUREZZA

- 1) **ATTENZIONE! È importante per la sicurezza delle persone seguire attentamente tutta l'istruzione. Una errata installazione o un errato uso del prodotto può portare a gravi danni alle persone.**
- 2) Leggere attentamente le istruzioni prima di iniziare l'installazione del prodotto.
- 3) I materiali dell'imballaggio (plastica, polistirolo, ecc.) non devono essere lasciati alla portata dei bambini in quanto potenziali fonti di pericolo.
- 4) Conservare le istruzioni per riferimenti futuri.
- 5) Questo prodotto è stato progettato e costruito esclusivamente per l'utilizzo indicato in questa documentazione. Qualsiasi altro utilizzo non espressamente indicato potrebbe pregiudicare l'integrità del prodotto e/o rappresentare fonte di pericolo.
- 6) GENIUS declina qualsiasi responsabilità derivata dall'uso improprio o diverso da quello per cui l'automatismo è destinato.
- 7) Non installare l'apparecchio in atmosfera esplosiva: la presenza di gas o fumi infiammabili costituisce un grave pericolo per la sicurezza.
- 8) Gli elementi costruttivi meccanici devono essere in accordo con quanto stabilito dalle Norme EN 12604 e EN 12605.
Per i Paesi extra-CEE, oltre ai riferimenti normativi nazionali, per ottenere un livello di sicurezza adeguato, devono essere seguite le Norme sopra riportate.
- 9) GENIUS non è responsabile dell'inosservanza della Buona Tecnica nella costruzione delle chiusure da motorizzare, nonché delle deformazioni che dovessero intervenire nell'utilizzo.
- 10) L'installazione deve essere effettuata nell'osservanza delle Norme EN 12453 e EN 12445. Il livello di sicurezza dell'automazione deve essere C+E.
- 11) Prima di effettuare qualsiasi intervento sull'impianto, togliere l'alimentazione elettrica.
- 12) Prevedere sulla rete di alimentazione dell'automazione un interruttore onnipolare con distanza d'apertura dei contatti uguale o superiore a 3 mm. È consigliabile l'uso di un magnetotermico da 6A con interruzione onnipolare.
- 13) Verificare che a monte dell'impianto vi sia un interruttore differenziale con soglia da 0,03 A.
- 14) Verificare che l'impianto di terra sia realizzato a regola d'arte e collegarvi le parti metalliche della chiusura.
- 15) L'automazione dispone di una sicurezza intrinseca antischiacciamento costituita da un controllo di coppia. E' comunque necessario verificarne la soglia di intervento secondo quanto previsto dalle Norme indicate al punto 10.
- 16) I dispositivi di sicurezza (norma EN 12978) permettono di proteggere eventuali aree di pericolo da **Rischi meccanici di movimento**, come ad Es. schiacciamento, convogliamento, cesoiamento.
- 17) Per ogni impianto è consigliato l'utilizzo di almeno una segnalazione luminosa nonché di un cartello di segnalazione fissato adeguatamente sulla struttura dell'infisso, oltre ai dispositivi citati al punto "16".
- 18) GENIUS declina ogni responsabilità ai fini della sicurezza e del buon funzionamento dell'automazione, in caso vengano utilizzati componenti dell'impianto non di produzione GENIUS.
- 19) Per la manutenzione utilizzare esclusivamente parti originali GENIUS.
- 20) Non eseguire alcuna modifica sui componenti facenti parte del sistema d'automazione.
- 21) L'installatore deve fornire tutte le informazioni relative al funzionamento manuale del sistema in caso di emergenza e consegnare all'Utente utilizzatore dell'impianto il libretto d'avvertenze allegato al prodotto.
- 22) Non permettere ai bambini o persone di sostare nelle vicinanze del prodotto durante il funzionamento.
- 23) Tenere fuori dalla portata dei bambini radiocomandi o qualsiasi altro datore di impulso, per evitare che l'automazione possa essere azionata involontariamente.
- 24) Il transito tra le ante deve avvenire solo a cancello completamente aperto.
- 25) L'Utente utilizzatore deve astenersi da qualsiasi tentativo di riparazione o d'intervento diretto e rivolgersi solo a personale qualificato.
- 26) **Tutto quello che non è previsto espressamente in queste istruzioni non è permesso**

IMPORTANT NOTICE FOR THE INSTALLER

GENERAL SAFETY REGULATIONS

- 1) **ATTENTION! To ensure the safety of people, it is important that you read all the following instructions. Incorrect installation or incorrect use of the product could cause serious harm to people.**
- 2) Carefully read the instructions before beginning to install the product.
- 3) Do not leave packing materials (plastic, polystyrene, etc.) within reach of children as such materials are potential sources of danger.
- 4) Store these instructions for future reference.
- 5) This product was designed and built strictly for the use indicated in this documentation. Any other use, not expressly indicated here, could compromise the good condition/operation of the product and/or be a source of danger.
- 6) GENIUS declines all liability caused by improper use or use other than that for which the automated system was intended.
- 7) Do not install the equipment in an explosive atmosphere: the presence of inflammable gas or fumes is a serious danger to safety.

- 8) The mechanical parts must conform to the provisions of Standards EN 12604 and EN 12605.
For non-EU countries, to obtain an adequate level of safety, the Standards mentioned above must be observed, in addition to national legal regulations.
- 9) GENIUS is not responsible for failure to observe Good Technique in the construction of the closing elements to be motorised, or for any deformation that may occur during use.
- 10) The installation must conform to Standards EN 12453 and EN 12445. The safety level of the automated system must be C+E.
- 11) Before attempting any job on the system, cut out electrical power.
- 12) The mains power supply of the automated system must be fitted with an all-pole switch with contact opening distance of 3mm or greater. Use of a 6A thermal breaker with all-pole circuit break is recommended.
- 13) Make sure that a differential switch with threshold of 0.03 A is fitted upstream of the system.
- 14) Make sure that the earthing system is perfectly constructed, and connect metal parts of the means of the closure to it.
- 15) The automated system is supplied with an intrinsic anti-crushing safety device consisting of a torque control. Nevertheless, its tripping threshold must be checked as specified in the Standards indicated at point 10.
- 16) The safety devices (EN 12978 standard) protect any danger areas against **mechanical movement Risks**, such as crushing, dragging, and shearing.
- 17) Use of at least one indicator-light is recommended for every system, as well as a warning sign adequately secured to the frame structure, in addition to the devices mentioned at point "16".
- 18) GENIUS declines all liability as concerns safety and efficient operation of the automate system, if system components not produced by GENIUS are used.
- 19) For maintenance, strictly use original parts by GENIUS.
- 20) Do not in any way modify the components of the automate system.
- 21) The installer shall supply all information concerning manual operation of the system in case of an emergency, and shall hand over to the user the warnings handbook supplied with the product.
- 22) Do not allow children or adults to stay near the product while it is operating.
- 23) Keep remote controls or other pulse generators away from children, to prevent the automated system from being activated involuntarily.
- 24) Transit through the leaves is allowed only when the gate is fully open.
- 25) The user must not attempt any kind of repair or direct action whatever and contact qualified personnel only.
- 26) **Anything not expressly specified in these instructions is not permitted.**

CONSIGNES POUR L'INSTALLATEUR

RÈGLES DE SÉCURITÉ

- 1) **ATTENTION! Il est important, pour la sécurité des personnes, de suivre à la lettre toutes les instructions. Une installation erronée ou un usage erroné du produit peut entraîner de graves conséquences pour les personnes.**
- 2) Lire attentivement les instructions avant d'installer le produit.
- 3) Les matériaux d'emballage (matière plastique, polystyrène, etc.) ne doivent pas être laissés à la portée des enfants car ils constituent des sources potentielles de danger.
- 4) Conserver les instructions pour les références futures.
- 5) Ce produit a été conçu et construit exclusivement pour l'usage indiqué dans cette documentation. Toute autre utilisation non expressément indiquée pourrait compromettre l'intégrité du produit et/ou représenter une source de danger.
- 6) GENIUS décline toute responsabilité qui dériverait d'usage impropre ou différent de celui auquel l'automatisme est destiné.
- 7) Ne pas installer l'appareil dans une atmosphère explosive: la présence de gaz ou de fumées inflammables constitue un grave danger pour la sécurité.
- 8) Les composants mécaniques doivent répondre aux prescriptions des Normes EN 12604 et EN 12605.
Pour les Pays extra-CEE, l'obtention d'un niveau de sécurité approprié exige non seulement le respect des normes nationales, mais également le respect des Normes susmentionnées.
- 9) GENIUS n'est pas responsable du non-respect de la Bonne Technique dans la construction des fermetures à motoriser, ni des déformations qui pourraient intervenir lors de l'utilisation.
- 10) L'installation doit être effectuée conformément aux Normes EN 12453 et EN 12445. Le niveau de sécurité de l'automatisme doit être C+E.
- 11) Couper l'alimentation électrique avant toute intervention sur l'installation.
- 12) Prévoir, sur le secteur d'alimentation de l'automatisme, un interrupteur onnipolaire avec une distance d'ouverture des contacts égale ou supérieure à 3 mm. On recommande d'utiliser un magnétothermique de 6A avec interruption onnipolaire.
- 13) Vérifier qu'il y ait, en amont de l'installation, un interrupteur différentiel avec un seuil de 0,03 A.
- 14) Vérifier que la mise à terre est réalisée selon les règles de l'art et y connecter les pièces métalliques de la fermeture.
- 15) L'automatisme dispose d'une sécurité intrinsèque anti-écrasement, formée d'un contrôle du couple. Il est toutefois nécessaire d'en vérifier le seuil d'intervention suivant les prescriptions des Normes indiquées au point 10.
- 16) Les dispositifs de sécurité (norme EN 12978) permettent de protéger des zones éventuellement dangereuses contre les **Risques mécaniques du mouvement**, comme l'écrasement, l'acheminement, le cisaillement.


SPIN AUTOMATED SYSTEM

The automated system consists of a steel upright with cathoporesis treatment, painted with polyester paint. It contains the non-reversing electro-mechanical operator and, in the versions with a control unit, the electronic control equipment. The system has a convenient manual release device for use in case of a power-cut or malfunction.

Also available: a version with upright and door in stainless-steel. The balancing spring and the beam (not supplied) must be ordered with reference to the sales price list.

Attention: The automated system was designed and built for controlling vehicle access. Do not use it for any other purpose.

1. DESCRIPTION AND TECHNICAL SPECIFICATIONS

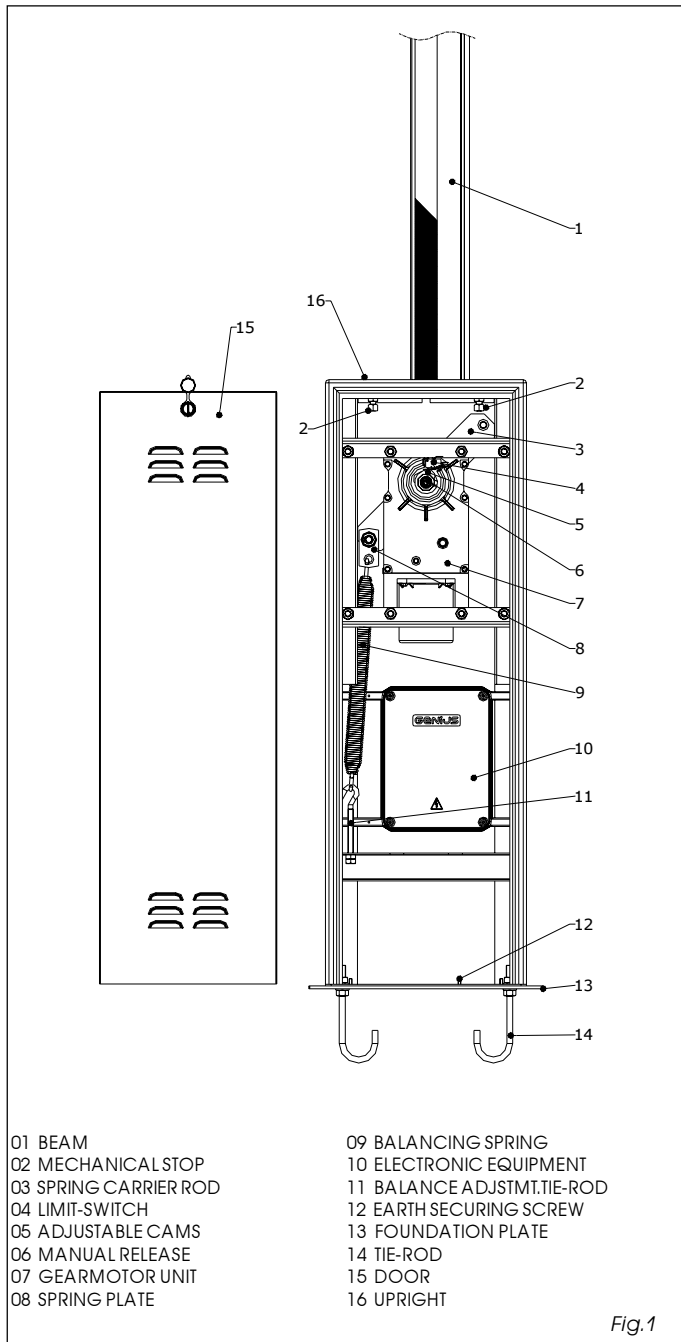

Tab. 1 Technical specifications


MODEL	SPIN			
	3	4	424	6
Power supply (Vac) (Vdc)	230	24	230	
Power (W)	250	100	380	
Current (A)	1.1	3.5	1.7	
Thermal protection (°C)	140		140	
Capacitor (µF)	12.5		12.5	
Max. torque (Nm)	60	100	150	
Opening time (sec) (1)	2.5	4	8	
Max beam length (m)	3 (2)	5 (2)	7 (2)	
Type and use frequency at 20°C	S3 - 50%	100%	S3 - 60%	
Minimum indicative cycles/hour at 20°C (1)	>360	>225	>450	>130
Operating ambient temperature (°C)	-20 +55			
Operator weight (kg)	63		69	
Protection class	IP44			
Operator dimensions (mm)	See fig. 3 - 4			

(1) Opening time and number of cycles calculated for correctly effected installations at the dimensions indicated in the installation instructions and without decelerations.

(2) No accessories can be fitted on the beams installed on Spin 3 models.

The articulated kit cannot be fitted on beams of over 4 metres installed on Spin 4 models.

No accessories can be fitted on beams of over 6 metres installed on Spin 6 models.

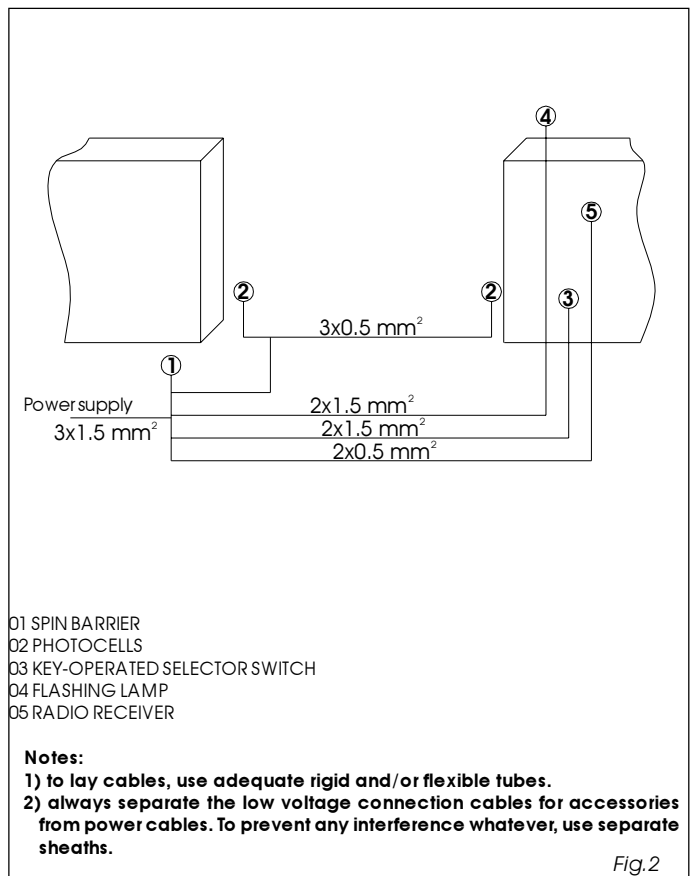

2.ELECTRICAL EQUIPMENT LAYOUT (standard installation)

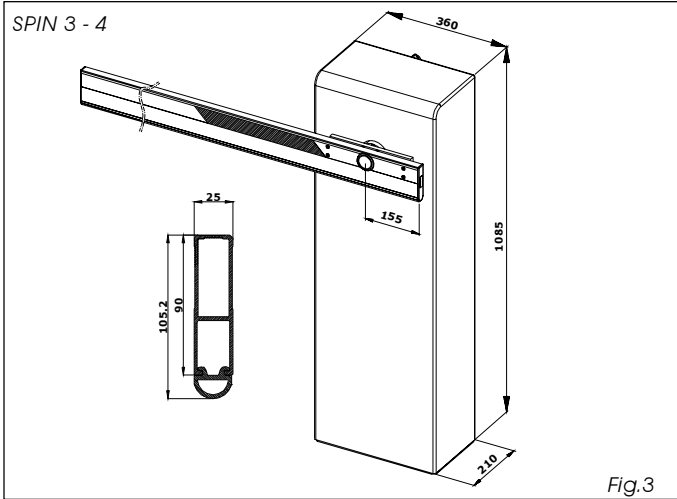


Fig.3

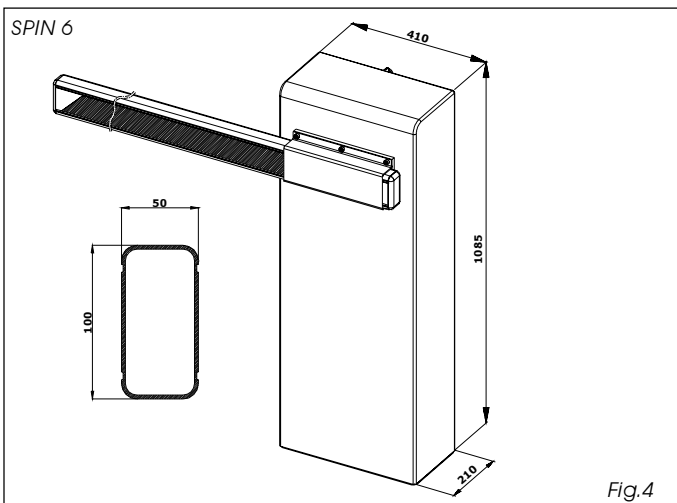


Fig.4

3.DIMENSIONS

Dimensions in mm
Dimensions in mm

4. INSTALLING THE AUTOMATED SYSTEM

4.1 PRELIMINARY CHECKS

To ensure safety and an efficiently operating automatic system, make sure the following conditions are observed:

- when moving, the beam must not, on any account, meet any obstacles or aerial power cables.
- the soil must permit sufficient stability for the foundation plinth.
- there must be no pipes or electrical cables in the plinth excavation area.
- if the barrier body is exposed to passing vehicles, install, where possible, adequate means of protection against accidental impact.
- check if an efficient earth plate is available for connection to

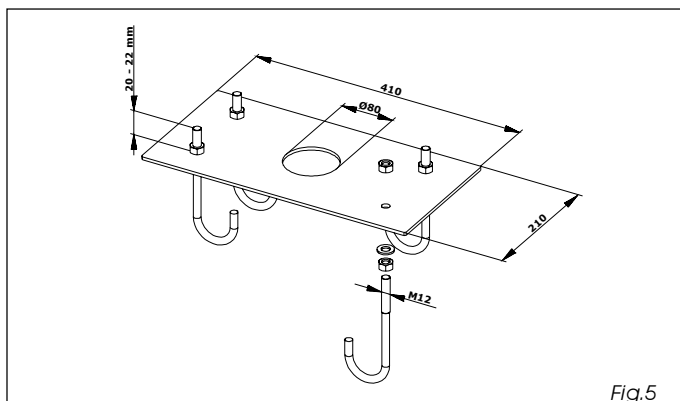


Fig.5

the upright.

4.2. MASONRY FOR FOUNDATION PLATE

- assemble the foundation plate as shown in figure 5.
- make a foundation plinth as shown in fig.6 (referred to clayey soil).
- wall the foundation plinth as shown in fig.6, providing one or more sheaths for routing electrical cables.
- using a spirit level, check if the plate is perfectly horizontal.
- wait for the cement to set.

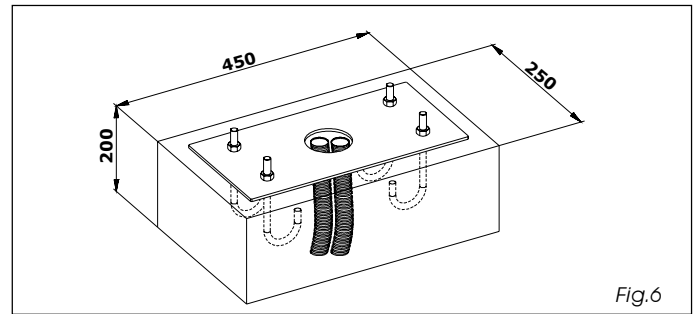


Fig.6

- unscrew the 4 upper nuts, which will be used later on to secure the upright.

4.3. MECHANICAL INSTALLATION

- using the four supplied nuts, secure the upright on the foundation plate as shown in fig.7.

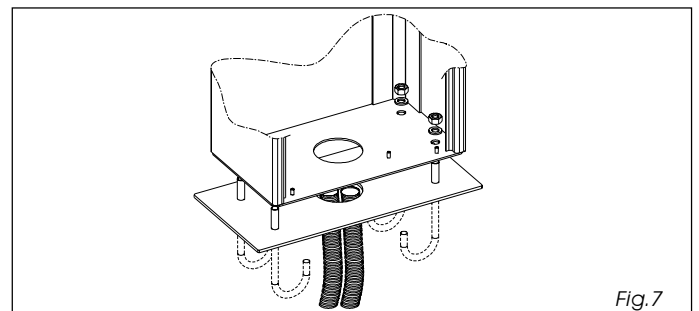


Fig.7

- remember that the upright door should normally face the building.
- prepare the operator for manual operating mode as described in chapter 6.

Attention: The automated system is supplied ready for left-hand installation (fig.8 ref. A).

Procedure for modifying the automated system from left- to right-hand (fig.8 ref.B).

- remove the tie-rod ref.1 fig.8.
- move the control unit from right to left ref.2 fig.8.
- position the tie-rod ref.1 fig.8 on the hole to the right of the control unit.

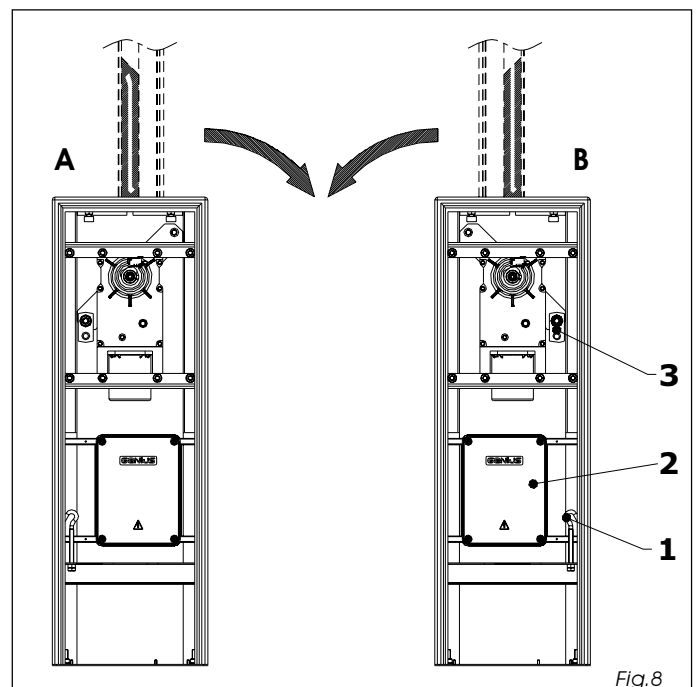


Fig.8

ENGLISH

- move the spring securing plate ref.3 fig.8 from the left pin to the right pin.
- remove the screws which fasten the rod carrier plate, fig. 9 and 10.

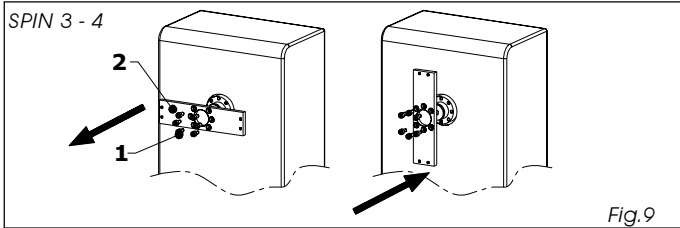


Fig.9

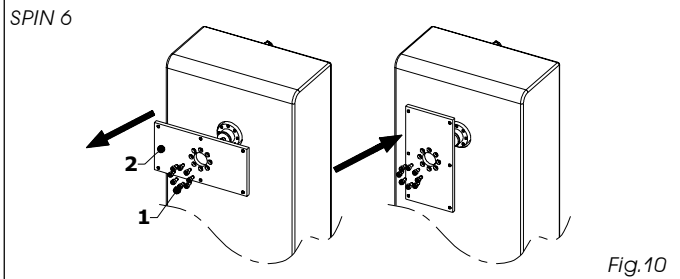


Fig.10

- rotate the rod carrier plate, ref.2 fig. 9 and 10, by 90°.
- re-fasten the whole assembly with the screws.

To fit the beam, follow the instructions below, according to the automated system model:

SPIN 3 - 4 (Fig.11)

- put the rod carrier plate in horizontal position.
- fit the beam, ref.1 fig.11.

N.B.: The rubber profile, ref.2 fig.11 must face the closing direction.

- screw the four supplied screws, ref. 3 fig.11.
- insert the hole plug, ref.4 fig.11.

SPIN 6 (Fig.12)

- put the rod carrier plate in vertical position.
- fit the beam, ref.1 fig.12.

N.B.: Beams for SPIN 6 models are ambidextrous

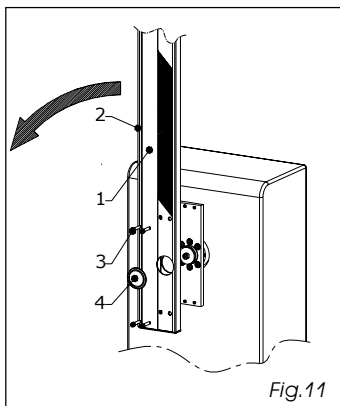


Fig.11

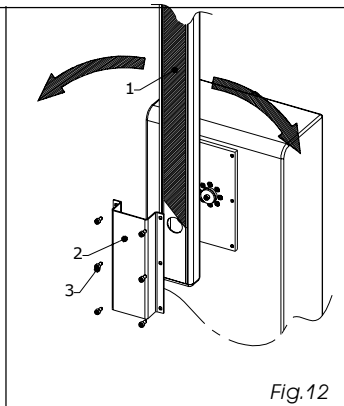


Fig.12

- position the "C" support, ref. 2 fig.12, and tighten the six

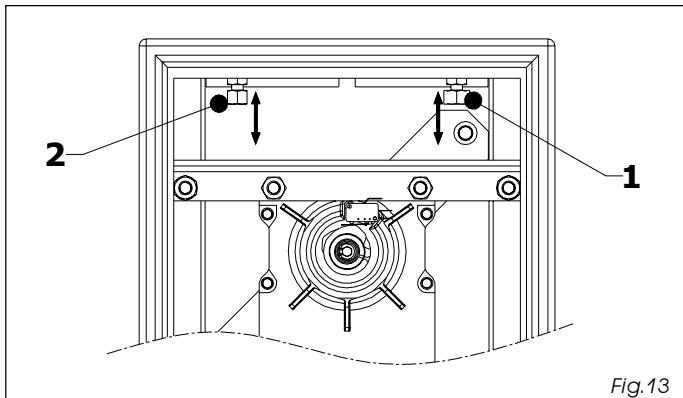


Fig.13

supplied screws, ref.3 fig.12.

- adjust the mechanical stops, fig. 13 ref.1 and 2.
- adjust the activation cams, fig. 14 ref.1 and 2, of the stroke-limit microswitches so that they are activated with the rod in

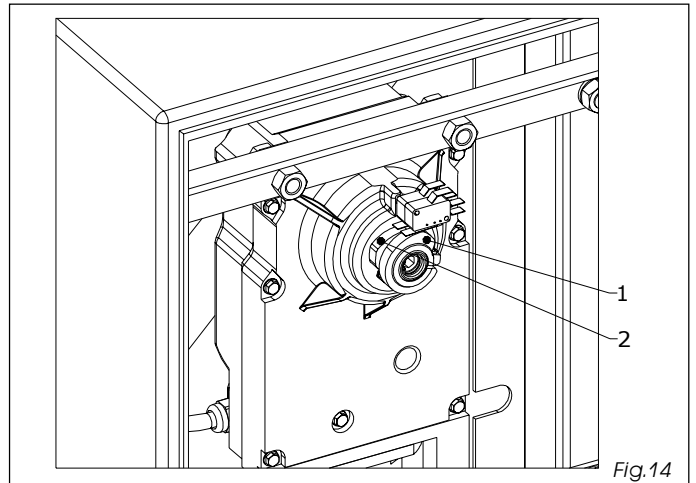


Fig.14

opening or closing position just before their respective mechanical stops.

4.4. INSTALLING AND ADJUSTING THE BALANCING SPRING.

The automated system requires a balancing spring, fig.15 ref.1, which must be ordered separately (like the beam). The type of spring to be fitted must be selected according to the length of the beam and of any installed accessories (see chap.8), selecting the spring from among those in the price list.

Spring installation and adjustment procedure:

- check if the operator is released: see chap. 6
- remove the tie-rod, fig 15 ref.3.
- while keeping the beam always in vertical position, connect the spring to the plate, fig.15 ref.2. For quicker installation, we recommend keeping the open part of the eyelet facing toward the installer.
- fit the tie-rod, fig. 15 ref.3, into the lower eyelet and in its securing hole.
- tighten one of the two nuts, fig. 15 ref.4, until you recover all backlash on the spring.
- position the beam at 45° and, turning the nut you have just tightened, pull the spring until you balance the weight of the rod in this position.
- tighten the second nut and secure the whole assembly.
- restore normal operation as in chap. 7.

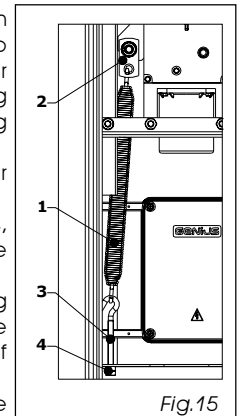


Fig.15

5. START-UP

- install the electronic control unit, observing the supplied instructions.
- check if motor connection is correct, in the following steps:
- set the operator to manual operation, see chap.6.
- position the beam at 45°, so that the two microswitches are not activated.
- re-fasten the operator, see chap.7.
- power up the system and provide a pulse with the start command. The first manoeuvre to be performed by the beam must be opening. If the beam starts with a closing cycle, cut power and reverse the phase wires of the control unit terminals.
- power up again and repeat the check.
- check the efficiency of the limit-switches, checking the status of the LEDs on the control unit.

6. MANUAL OPERATION

If the barrier has to be moved manually due to a power failure or malfunction of the automated system, use the release device as follows:

- cut power to the system with the master-switch.
- open the door on the upright with the supplied coded key.

- fit the special key, located inside the upright, in the release hole (fig. 16, ref.1) and turn it anti-clockwise for a few turns until you reach the mechanical stop limit.

Attention:

The mechanical stop consists of a spring pin (fig.17 ref.1) that must not be overpassed to prevent jeopardizing the operation of the release device.

When the system has been released, the beam could remain in its initial position. Therefore, the beam must be moved in both directions until the release system is felt to trip.

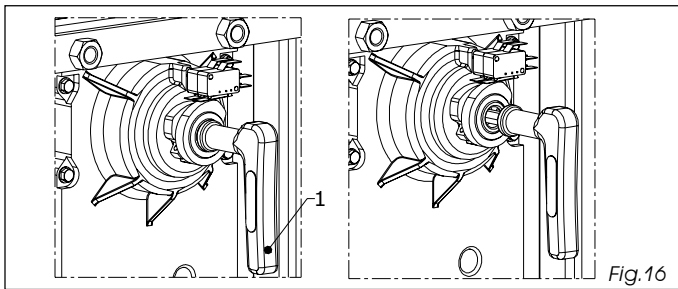


Fig.16

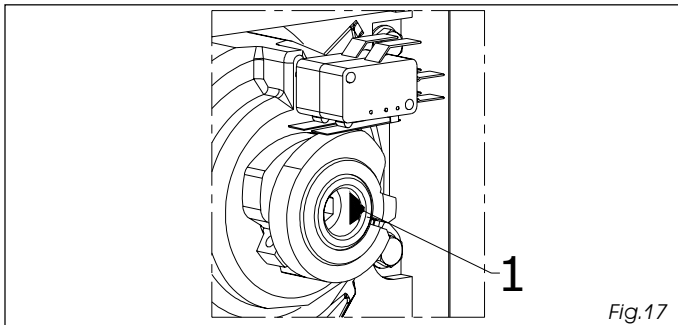


Fig.17

- open or close the beam manually.

7. RESTORING NORMAL OPERATION

To prevent an involuntary pulse from activating the barrier during the manoeuvre, cut power to the system before restoring normal operation.

- open the rear hood of the upright with the supplied coded key.
- fit the special key, located inside the upright, in the release hole (fig.18, ref.A) and turn it clockwise for a few turns until you reach the mechanical stop limit.
- move the beam manually until the mechanical release is felt to uncouple.
- turn the key clockwise again to release the system.

Attention: There is a round edge on the release key, which must rest on the shaft (fig. 18 ref.B). When this position is

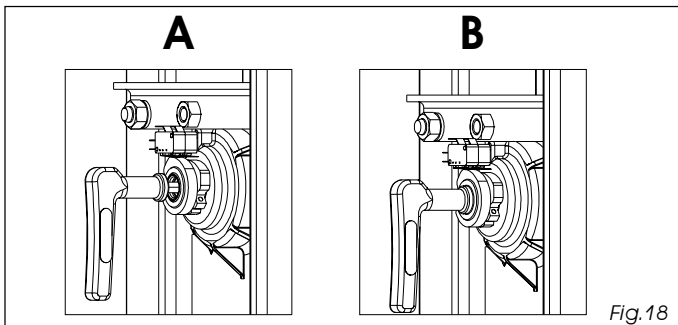


Fig.18

reached, stop turning the release key to avoid jeopardising the efficiency of the system.

- close the rear hood of the upright.

8. AVAILABLE ACCESSORIES

SKIRT KIT

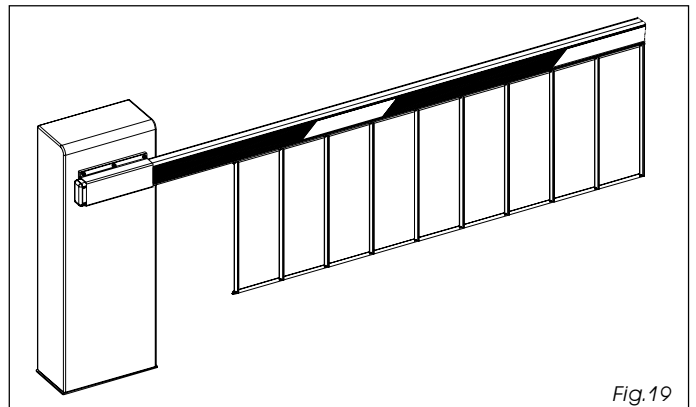


Fig.19

The skirt kit increases visibility of the beam.

Available length: 2/3 metres.

Attention: If a skirt kit is installed, the balancing spring must be adapted.

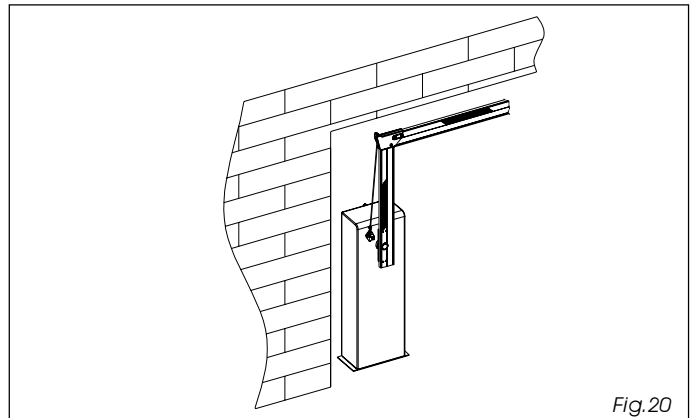


Fig.20

ARTICULATION KIT

The articulation kit makes it possible to articulate the rigid beam to a maximum ceiling heights of 3 m.

Attention: If an articulated kit is installed, the balancing spring must be adapted.

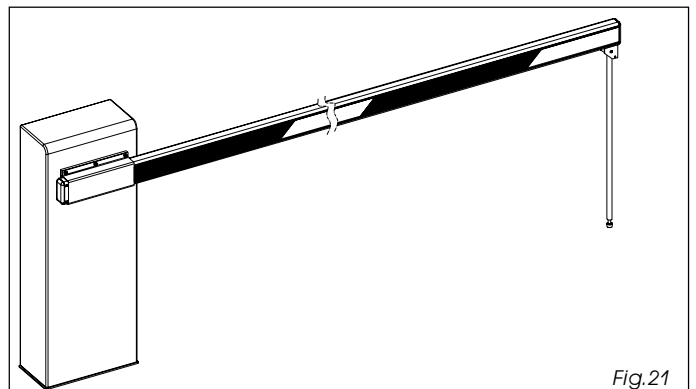
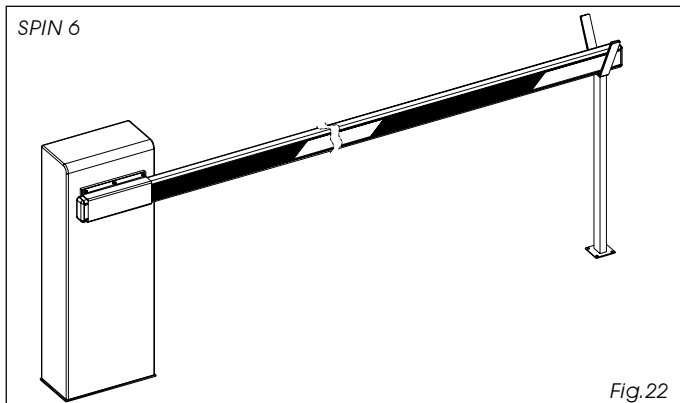


Fig.21

END FOOT

The end foot allows the beam to rest when closing and thus prevents the profile bending downward.

Attention: If a foot is installed, the balancing spring must be readjusted.

FORK-SUPPORT FOR SPIN 6

The fork has two functions:

- it prevents the beam, when closing, from bending and splitting if its end is stressed by extraneous forces.
- it allows the beam to rest when closed and thus prevents the profile bending downward.


POSITIONING THE FORK-SUPPORT FOUNDATION PLATE FOR SPIN 6

To position the fork-support foundation plate, refer to fig.23 where:

L = beam length (in mm)

A = $L - 500$ (in mm)

N.B.: For correct alignment, we advise you to position the fork-

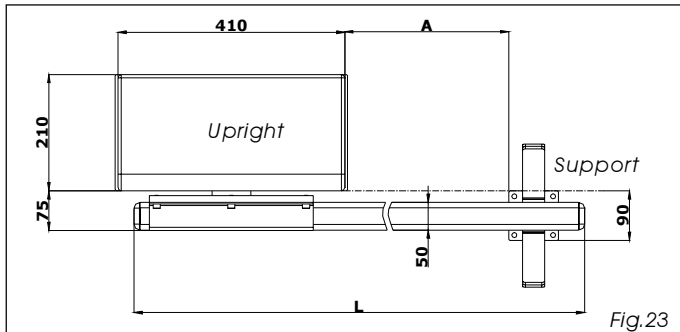

support after fully installing the beam - in this way, the beam will be correctly positioned at the centre of the fork.

All values in mm

N.B.: The values are purely indicative.






9. MAINTENANCE

To ensure correct long-term operation, carry out the following checks every six months:

- check if all the safety devices in use are connected and efficient.
- check if the anti-crushing clutch is correctly set.
- check the condition and efficiency of the earth connection.
- check if all screws are tight.
- check if the system is correctly balanced.
- check if the spring is in good condition

10. REPAIRS

For any repairs, strictly contact qualified personnel only.

DICHIARAZIONE CE DI CONFORMITÀ PER MACCHINE (DIRETTIVA 89/392 CEE, ALLEGATO II, PARTE B)	EC MACHINE DIRECTIVE COMPLIANCE DECLARATION (DIRECTIVE 89/392 EEC, APPENDIX II, PART B)	DÉCLARATION CE DE CONFORMITÉ (DIRECTIVE EUROPÉENNE "MACHINES" 89/392/CEE, ANNEXE II, PARTIE B)
<p>Fabbricante: GENIUS s.r.l. Indirizzo: Via Padre Elzi, 32 24050 - Grassobbio BERGAMO - ITALIA</p> <p>Dichiarazione: L'Attuatore mod. SPIN</p> <ul style="list-style-type: none"> è costruito per essere incorporato in una macchina o per essere assemblato con altri macchinari per costituire una macchina ai sensi della Direttiva 89/392 CEE, e successive modifiche 91/368/CEE, 93/44/CEE, 93/68/CEE; è conforme ai requisiti essenziali di sicurezza delle seguenti altre direttive CEE: 73/23 CEE e successiva modifica 93/68/CEE. 89/336 CEE e successiva modifica 92/31 CEE e 93/68/CEE <p>e inoltre dichiara che non è consentito mettere in servizio il macchinario fino a che la macchina in cui sarà incorporata o di cui diverrà componente sia stata identificata e ne sia stata dichiarata la conformità alle condizioni della Direttiva 89/392/CEE e successive modifiche trasposta nella legislazione nazionale dal DPR n° 459 del 24 Luglio 1996.</p> <p>Grassobbio, 1 Marzo 2002</p> <p>L' Amministratore Delegato D. Gianantoni</p> 	<p>Manufacturer: GENIUS s.r.l. Address: Via Padre Elzi, 32 24050 - Grassobbio BERGAMO - ITALY</p> <p>Hereby declares that: the SPIN</p> <ul style="list-style-type: none"> is intended to be incorporated into machinery, or to be assembled with other machinery to constitute machinery in compliance with the requirements of Directive 89/392 EEC, and subsequent amendments 91/368 EEC, 93/44 EEC and 93/68 EEC; complies with the essential safety requirements in the following EEC Directives: 73/23 EEC and subsequent amendment 93/68 EEC. 89/336 EEC and subsequent amendments 92/31 EEC and 93/68 EEC. <p>and furthermore declares that unit must not be put into service until the machinery into which it is incorporated or of which it is a component has been identified and declared to be in conformity with the provisions of Directive 89/392 EEC and subsequent amendments enacted by the national implementing legislation.</p> <p>Grassobbio, 1 March 2002</p> <p>Managing Director D. Gianantoni</p> 	<p>Fabricsant: GENIUS s.r.l. Adresse: Via Padre Elzi, 32 24050 - Grassobbio BERGAMO - ITALIA</p> <p>Déclare d'une part que l'automatisme mod. SPIN</p> <ul style="list-style-type: none"> est prévue soit pour être incorporée dans une machine, soit pour être assemblée avec d'autres composants ou parties en vue de former une machine selon la directive européenne "machines" 89/392 CEE, modifiée 91/368 CEE, 93/44 CEE, 93/68 CEE. satisfait les exigences essentielles de sécurité des directives CEE suivantes: 73/23 CEE, modifiée 93/68 CEE. 89/336 CEE, modifiée 92/31 CEE et 93/68 CEE. <p>et d'autre part qu'il est formellement interdit de mettre en fonction l'automatisme en question avant que la machine dans laquelle il sera intégrée ou dont il constituera un composant ait été identifiée et déclarée conforme aux exigences essentielles de la directive européenne "machines" 89/392/CEE, et décrets de transposition de la directive.</p> <p>Grassobbio, le 1 Mars 2002</p> <p>L' Administrateur Délégué D. Gianantoni</p> 
<p>DECLARACIÓN DE CONFORMIDAD CE PARA MÁQUINAS (DIRECTIVA 89/392 CEE, ANEXO II, PARTE B)</p> <p>Fabricante: GENIUS s.r.l. Dirección: Via Padre Elzi, 32 24050 - Grassobbio BERGAMO - ITALIA</p> <p>Declara que: El equipo automático mod. SPIN</p> <ul style="list-style-type: none"> Ha sido construido para ser incorporado en una máquina, o para ser ensamblado con otros mecanismos a fin de constituir una máquina con arreglo a la Directiva 89/392 CEE y a sus sucesivas modificaciones 91/368 CEE, 93/44 CEE y 93/68 CEE. Cumple los requisitos esenciales de seguridad establecidos por las siguientes directivas CEE: 73/23 CEE y sucesiva modificación 93/68 CEE, 89/336 CEE y sucesivas modificaciones 92/31 CEE y 93/68 CEE. <p>Asimismo, declara que no es permitido poner en marcha el equipo si la máquina en la cual se incorporado, o de la cual se convertirá en un componente, no ha sido identificada o no ha sido declarada su conformidad a lo establecido por la Directiva 89/392 CEE y sus sucesivas modificaciones, y a la ley que la incorpora en la legislación nacional.</p> <p>Grassobbio, 1º de Marzo de 2002.</p> <p>Administrador Delegado D. Gianantoni</p> 	<p>EG-KONFORMITÄTSERKLÄRUNG ZU MASCHINEN (gemäß EG-Richtlinie 89/392/EWG, Anhang II, Teil B)</p> <p>Hersteller: GENIUS s.r.l. Adresse: Via Padre Elzi, 32 24050 - Grassobbio BERGAMO - ITALIEN</p> <p>erklärt hiermit, daß: der Antrieb Mod. SPIN</p> <ul style="list-style-type: none"> zum Einbau in eine Maschine oder mit anderen Maschinen zu einer Maschine im Sinne der Richtlinie 89/392 EWG und deren Änderungen 91/368 EWG, 93/44 EWG, 93/68 EWG vorgesehen ist. den wesentlichen Sicherheitsbestimmungen folgender anderer EG-Richtlinien entspricht: 73/23 EWG und nachträgliche Änderung 93/68 EWG 89/336 EWG und nachträgliche Änderung 92/31 EWG sowie 93/68 EWG <p>und erklärt außerdem, daß die Inbetriebnahme solange untersagt ist, bis die Maschine, in welche diese Maschine eingebaut wird oder von der sie ein Bestandteil ist, den Bestimmungen der Richtlinie 89/392 EWG sowie deren nachträglichen Änderungen entspricht.</p> <p>Grassobbio, 1 März 2002</p> <p>Der Geschäftsführer D. Gianantoni</p> 	<p>Le descrizioni e le illustrazioni del presente manuale non sono impegnative. GENIUS si riserva il diritto, lasciando inalterate le caratteristiche essenziali dell'apparecchiatura, di apportare in qualunque momento e senza impegnarsi ad aggiornare la presente pubblicazione, le modifiche che essa ritiene convenienti per miglioramenti tecnici o per qualsiasi altra esigenza di carattere costruttivo o commerciale.</p> <p>The descriptions and illustrations contained in the present manual are not binding. GENIUS reserves the right, whilst leaving the main features of the equipments unaltered, to undertake any modifications to holds necessary for either technical or commercial reasons, at any time and without revising the present publication.</p> <p>Les descriptions et les illustrations du présent manuel sont fournies à titre indicatif. GENIUS se réserve le droit d'apporter à tout moment les modifications qu'elle jugera utiles sur ce produit tout en conservant les caractéristiques essentielles, sans devoir pour autant mettre à jour cette publication.</p> <p>Las descripciones y las ilustraciones de este manual no comportan compromiso alguno. GENIUS se reserva el derecho, dejando inmutadas las características esenciales de los aparatos, de aportar, en cualquier momento y sin comprometerse a poner al día la presente publicación, todas las modificaciones que considere oportunas para el perfeccionamiento técnico o para cualquier otro tipo de exigencia de carácter constructivo o comercial.</p> <p>Die Beschreibungen und Abbildungen in vorliegendem Handbuch sind unverbindlich. GENIUS behält sich das Recht vor, ohne die wesentlichen Eigenschaften dieses Gerätes zu verändern und ohne Verbindlichkeiten in Bezug auf die Neufassung der vorliegenden Anleitungen, technisch bzw. konstruktiv / kommerziell bedingte Verbesserungen vorzunehmen.</p>

GENIUS®

GENIUS s.r.l.
Via Padre Elzi, 32
24050 - Grassobbio
BERGAMO-ITALY
tel. 0039.035.4242511
fax. 0039.035.4242600
info@geniusg.com
www.geniusg.com

Timbro rivenditore: / Distributor's stamp: / Timbre de l'agent: /
Sello del revendedor: / Fachhändlerstempel:

