




## ASSEMBLY AND SIZE OF THE INTRACODE PANEL

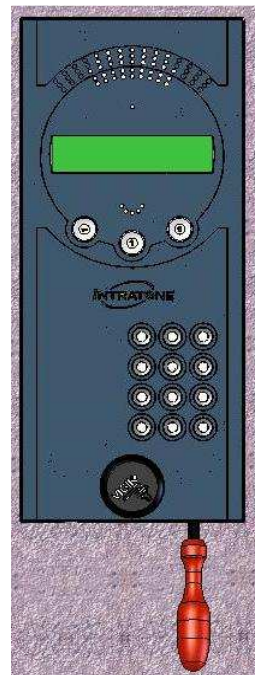


Do not pinch the cables when closing:  
**Risk of cutting when tightening.**

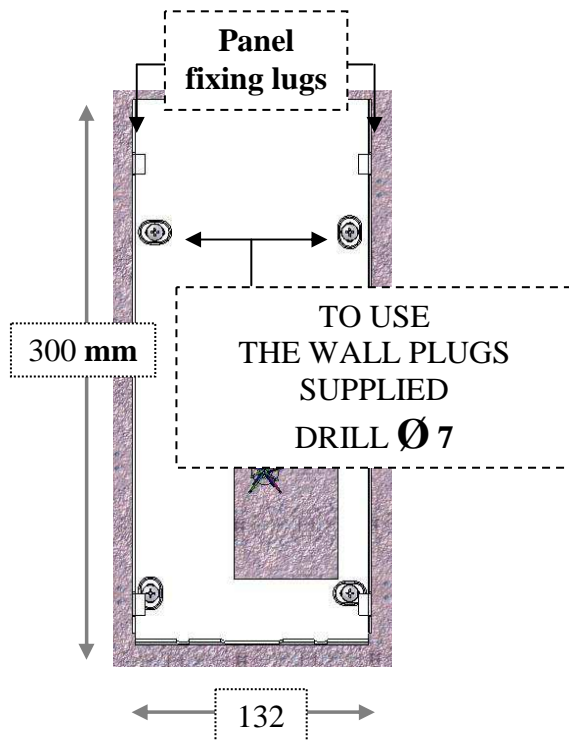



Slide  
the panel  
to close  
**AND**  
fix it by  
screwing it  
in place

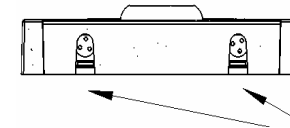

2 screws for fixing the panel to the base

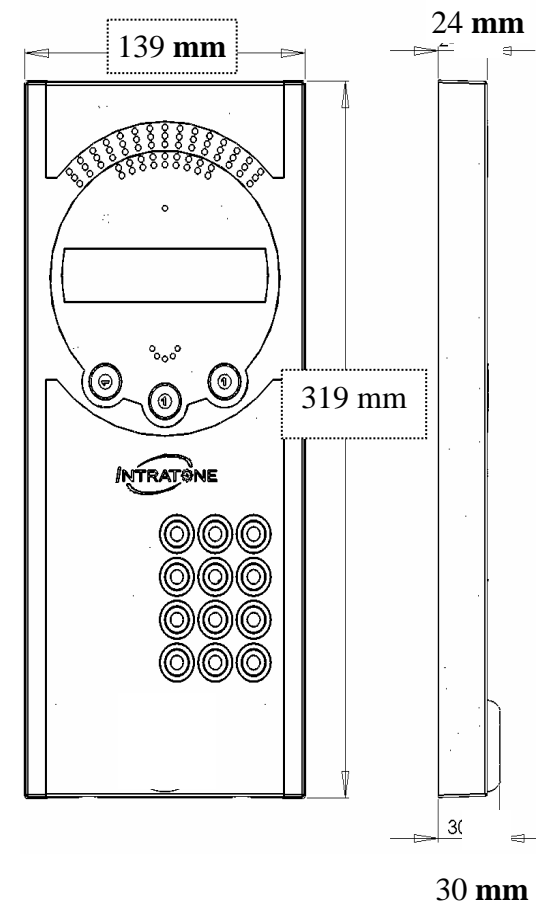

## ASSEMBLY AND SIZE OF THE GSM UNIT AND THE CENTRAL UNIT

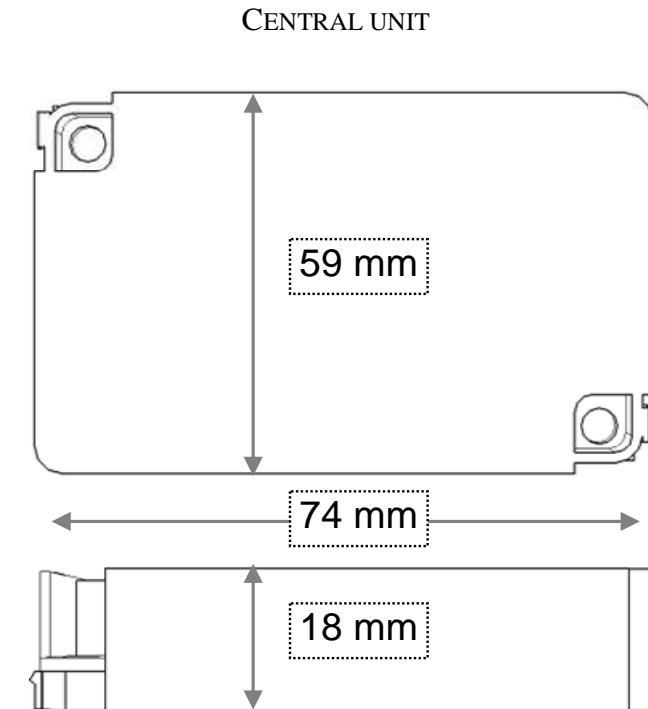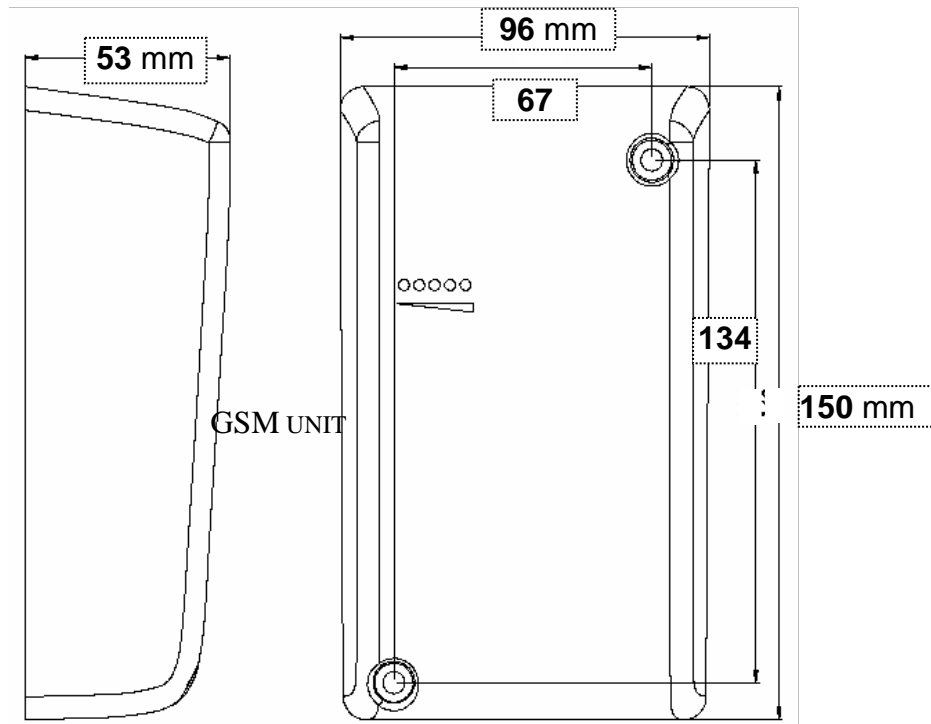

## SWAN-NECK FITTING



### "SWAN-NECK" CABLING

To prevent water infiltration by the flow of water along the cables, **fit the cables** so that water cannot reach the equipment.

