


Art.SL5488 Telephone

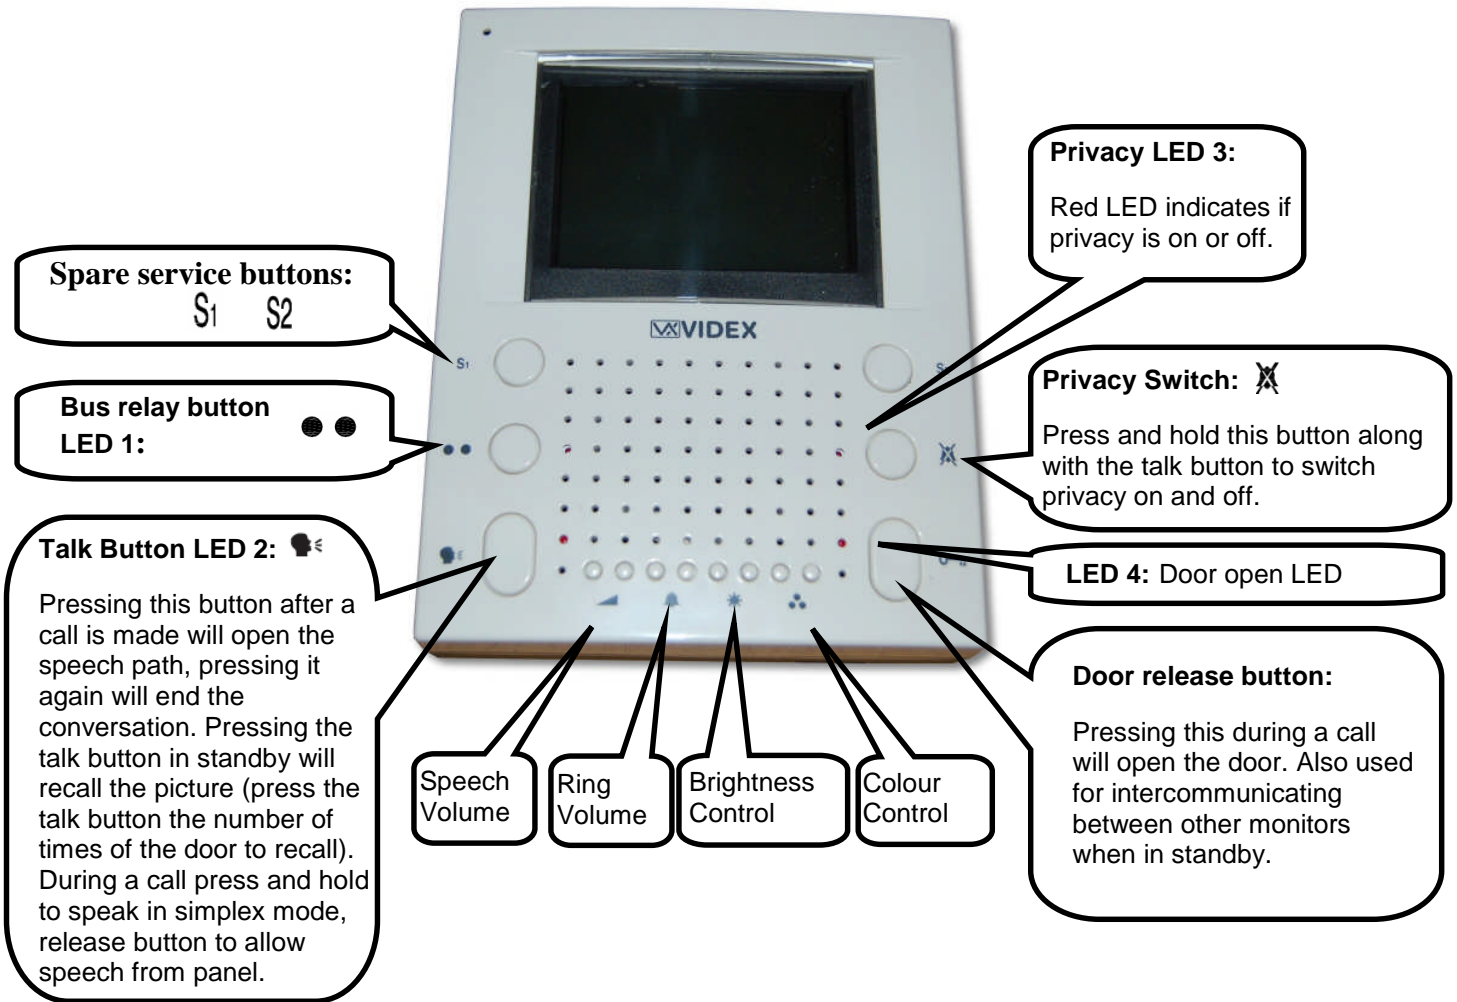


USING THE PRIVACY FACILITY

STEP 1

To activate the privacy facility (i.e. No calls will be received).

Press and hold the button and the button (for approx. 3 seconds). The privacy on LED3 will illuminate.

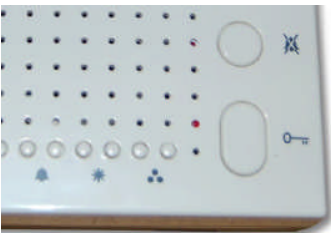

STEP 2

To deactivate the privacy facility before the time out period.

Press and hold the button and the button (for approx. 3 seconds). The privacy on LED3 will turn off.



ACTIVATING THE 2305 RELAY

Bus relay button. To activate a bus relay pick up the handset and press as many times as the address value of the relay. (Please note this relay will not be fitted on all systems)




Art.SL5488 Telephone



ANSWERING A CALL


STEP 1

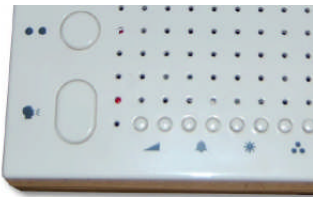An incoming call will be signalled by an audible tone from the videophone and the picture will appear (the picture will only appear on extension phone 1).





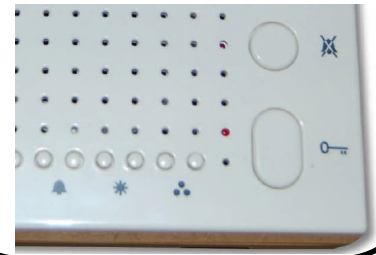
STEP 2

Press the  button once and speak with the caller, alternatively hold the  button for 3 seconds to activate simplex speech. Then pressing and holding the button will allow speech to the door and releasing it will allow speech from the door.

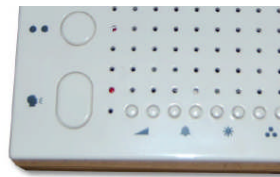









STEP 3



To open the door press the  button. To end the call press the  button.



Adjusting the number of rings, privacy time and intercommunication:

Number of rings: - To program the number of rings the monitor must be in programming mode. This is achieved by pressing the two following buttons at the same time – the left button of the  volume control and the right button of the  colour intensity control. When the programming mode is entered LED1 starts flashing, this will automatically reset after 20 seconds of idle time. When in the programming mode press and hold the  button, LED1 will stop flashing and LED2 will start to flash showing the number of rings (each flash = 1 ring, i.e. 6 flashes = 6 rings) once the required value of rings has been reached, release the  button. LED1 will start flashing again to signal that other programming operations can be performed. After a short period with no further buttons being pressed, programming mode will end.

Privacy Operation: - Press and hold the  button and the  button (for approx. 3 seconds) to enable the privacy function. LED3 next to the button illuminates and the unit emits a beep. To set the privacy duration press and hold the  button, LED 1 will stop flashing and LED 3 will start to flash showing the number of times the button is pressed (each flash = 15 minutes i.e. 8 flashes = 2 hours). Once the duration has been reached release the  button. Wait approx 10 seconds for LED1 to stop flashing to signal that the new value is stored.

Intercommunication: - Firstly please note that extension 1 is mandatory. One extension in each apartment must be set as extension 1. To intercommunicate with another device in the same apartment simply press the  button the number of times of the extension to call i.e. to call extension 3 press the button 3 times and wait. To intercommunicate with another apartment (dip-switch 1 on SW3 only) simply press the  button the number of times of the phone ID to call and wait for an answer.