
BIOMETRIC TRANSMITTER FOR OPERATING WITH MOTION RECEIVERS.


GO-BIO





More information in www.jcm-tech.com



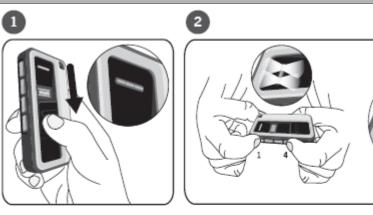

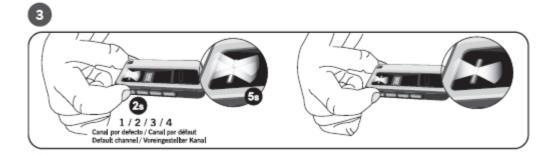

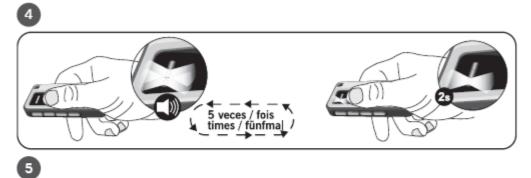

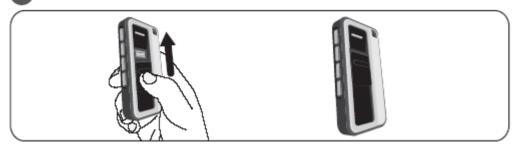

TECHNICAL DATA

Operating frequency	868,35 MHz		
Power supply	1,5Vdc (1 battery type AAA)		
Consumption operating / standby	200mA / 40uA		
Radiated power	< 25mW		
Memory	Maximum 10 fingerprints		
Operating temperature	-20°C to + 55°C		
Dimensions	76x41x15mm		
Battery duration (approx)	1,5 years (with lithium battery)		

TERMINOLOGY

Default channel: the channel that will be send in biometric activation operating

Authorised channels: The authorised pushbuttons for each of the finger-prints, available in the pushbutton activation + biometric validation operating

Master fingerprint: fingerprint that allows using operating and configuration modes


Not master fingerprint: fingerprint that only allows using the operating mode

LIGHT AND SOUND INDICATORS

Action	Led Blue	Led White	Led Orange	Buzzer
Operating mode				
Biometric reader waiting a finger-		ON		
print				
Confirmation fingerprint reading ok	ON 2 seconds			1 beep
Biometric reader waiting for a	Flashing	ON		
finger-print in pushbutton mode				
Unrecognized fingerprint			ON	2 beeps
Error in fingerprint reading			Flashing	2 beeps
Low battery		ON	ON	4 beeps
Biometric reader damaged			ON	1 long
				beep
Configuration mode (exclusive				
actions in this mode)				
Device in configuration mode	Flashing	Flashing	Flashing	
waiting for an action				
Device waiting for a finger-print	Flashing	ON	Flashing	
Confirmation fingerprint reading ok	ON 2 seconds			1 beep
in configuration mode				
Device waiting for authorised	ON	ON		
channels or fingerprints				
Erasing one fingerprint		ON		5 beeps
Advise total reset			Flashing	10 beeps
Total reset			Flashing	10 fast
				beeps
Memory full			Flashing	10 beeps
Device in MASTER / NOT MASTER	ON		ON	
configuration mode				
MASTER FINGERPRINT			Flashing	1 beep
Configuration				
NOT MASTER FINGERPRINT			ON	2 beeps
Configuration				

CONFIGURATION MODE

To enter in **configuration mode**, do the following stops:

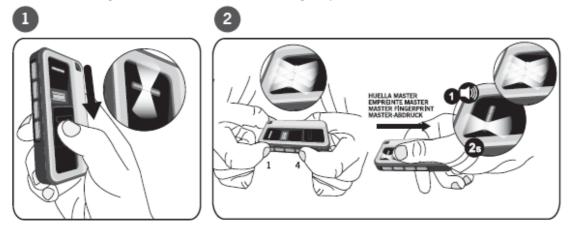

FINGERPRINT PROGRAMMING



First enter in configuration mode.




Tiempo en el que se podrán presionar otros pulsadores para seleccionar los demás canales que se desee programar para la misma huella. Al finalizar esta selección el led blanco quedará encendido fijo.

Délai pendant lequel on pourra appuyer sur d'autres boutons, afin de sélectionner les autres canaux que l'on désire programmer pour la même empreinte, Une fois cette sélection finalisée, la led blanche émettra une lumière fixe.

Time in which other pushbuttons could be pressed for selecting the other desired channels to programme for the same fingerprint. At the end of this selection the white led will remain at ON.

Während dieser Zeit können Sie andere Knöpfe drücken, um die weiteren Kanäle zu wählen, die Sie mit dem gleichen Abdruck programmieren möchten. Nach beendeter Auswahl leuchtet die weiße LED stetig auf.



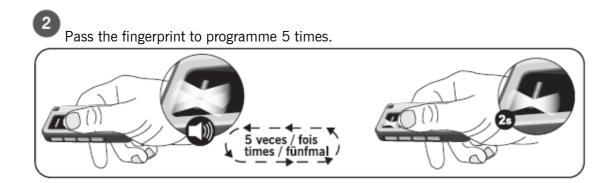

The equipment will remain in **configuration mode**.

This process must be repeated for all the desired fingerprints to programme. The first channel selected will be used by default channel.


All the programmed fingerprints will be MASTER FINGERPRINTS by default. For the NOT MASTER FINGER-PRINTS programming, see clause MASTER FINGERPRINTS / NOT MASTER FINGER-PRINTS CONFIGURATION.

Note: If a fingerprint reading is not ok, the orange led will flash and two jeeps will be heard.

MASTER FINGERPRINT / NOT MASTER FINGERPRINT CONFIGURATION

Being in **configuration mode**, the device must be configured as follows:

A: HUELLAS NO MASTER / EMPREINTES NO MASTER / NOT MASTER FINGERPRINT / NICHT-MASTER-ABDRÜCKE B: HUELLAS MASTER / EMPREINTES MASTER / MASTER FINGERPRINT / MASTER-ABDRÜCKE

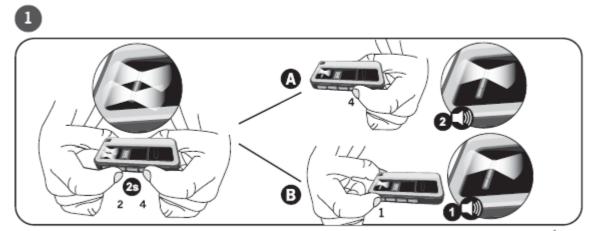



Once the device is configured, for the desired fingerprint programming follow the clause

ERASING THE MEMORY

To erase the memory, the device must be in **configuration mode**.


A) ERASING ONE FINGERPRINT

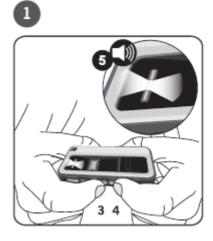

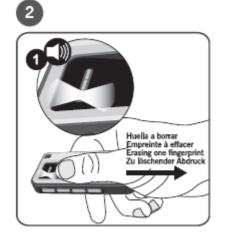

2

B) TOTAL RESET

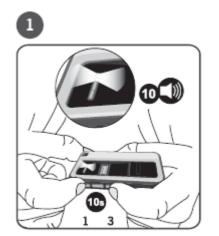

Keep pressed the two pushbuttons and a serial of fast beeps will be heared, indicating that the memory has been totally erased.


The equipment remains in **configuration mode**.


To exit configuration mode, wait 10 seconds without doing any action, or closet he protective cover, the device will exit configuration mode, and the three leds will go off. Two beeps will be heard.

OPERATING MODE

Three operating modes:


A) BIOMETRIC ACTIVATION OPERATING:

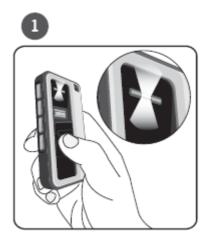

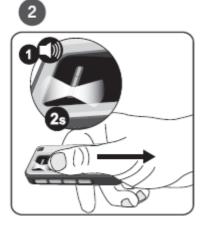

The default-programmed channel will be sending for the fingerprint used.

B) PUSHBUTTON ACTIVATION + BIOMETRIC VALIDATION OPERATING:

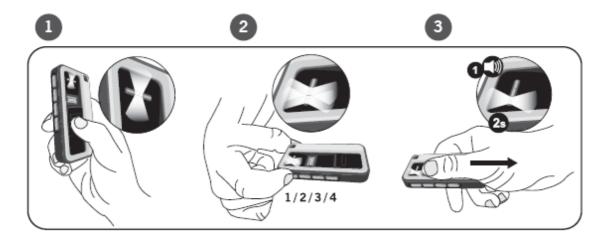

C) NORMAL TRANSMITTER OPERATING

If there are not fingerprints programmed in the device, this will operates as a normal transmitter pressing any of the buttons.

If the fingerprint is not recognised, the orange led will be at ON and two beeps will be heard.

LOW BATTERY INDICATOR

At the time the protective cover is opened, the white and orange leds will be at ON and four beeps will be heard.

BIOMETRIC READER DAMAGED

At the time the protective cover is opened, the orange led will be at ON and one beep will be heard.

REPLACING THE BATTERY

Unscrew the screw in the rear part and replace the battery with the new one. Always use batteries of the same technical data that ones supplied by the manufacturer to guarantee its durability.

RECOMMENDATIONS


How to pass the fingerprint correctly over the reader?

CORRECT

1. Make sure finger is clean and dry. Place finger flat above the sensor strip with the top knuckle above the sensor.


2. Swipe finger straight down keeping firm contact with the sensor. The swipe should be a slow, constant speed.

Special notes: Use the same finger for every swipe. It is important to swipe finger slowly and firmly as this is the reason most swipes fall.

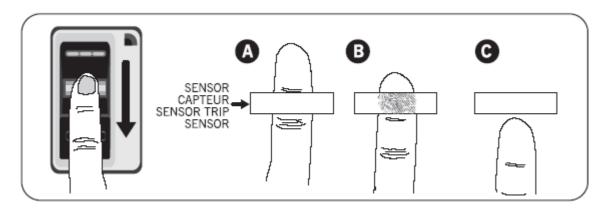

- **A:** Start swipe with the top knuckle above the sensor strip.
- B: Swipe finger straight down keeping firm contact with the sensor.
- **C:** The scan should end at the tip of finger.

INCORRECT

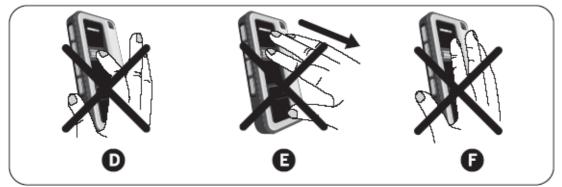

D: Do not bend finger during swipe as this will only scan the tip of your finger.

- **E:** Swipe fingerstraight down, not at an angle.
- **F**: Swipe flat, not tilted or rolled to one side.

How to avoid damaging the biometric reader?

Keep always the protective cover closed when the transmitter is not used. Avoid scratching the surface when it is used.

For avoiding a bigger consumption of the biometric reader, keep always the protective cover closed when it is not used.

JCM TECHNOLOGIES, S.A. declares herewith that the product GO-BIO, complies with the requirements of the 1999/5/ CEE R&TTE Directive, insofar as the product is used correctly

CE DECLARATION OF CONFORMITY

See web www.jcm-tech.com