


Security Light Camera




Screw Kit

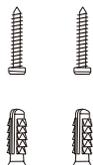

Quick Start Guide

Security Light Camera

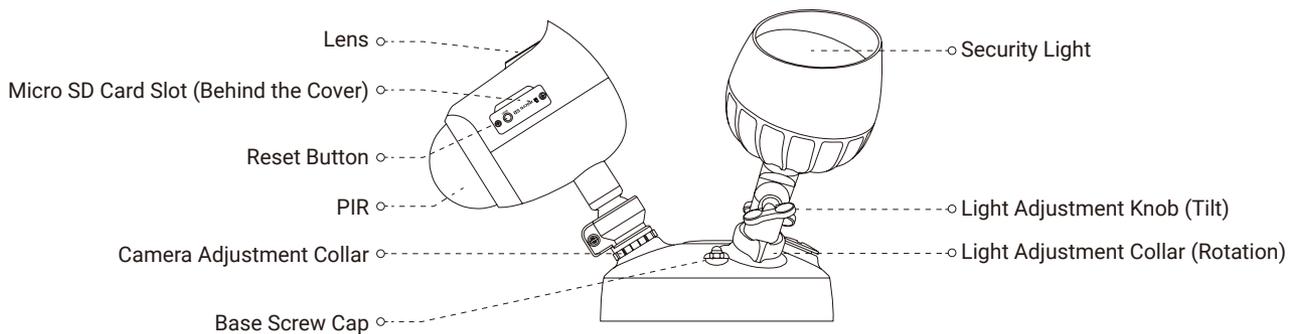

Name	Description
Light Adjustment Knob (Tilt)	Loosen the adjustment knob and tilt the light up to 180°. Tighten the adjustment knob when you have the light in the position you want.
Light Adjustment Collar (Rotation)	Loosen the adjustment collar and rotate the light up to 360°. Tighten the adjustment collar when you have the light in the position you want.
Camera Adjustment Collar	Loosen the adjustment collar and rotate the camera up to 360°. Tighten the adjustment collar when you have the camera in the position you want.
Micro SD Card (sold separately)	Initialize the card in the EZVIZ app before using it.
Reset Button	Hold for 5 seconds to restart and reset all parameters to default.
PIR	With the PIR (Passive Infrared), the device can detect a human body, animals, or other objects.




Get the EZVIZ app

1. Connect your mobile phone to Wi-Fi using your 2.4GHz network.
2. Search for "EZVIZ" in App Store or Google Play™.
3. Download and install the EZVIZ app.
4. Launch the app, and register an EZVIZ user account.


Installation

- Installation height affects motion detection, security light camera recommended installation height: 3 m (10 feet) above the ground.
- Camera recommended setting angle: 22 degree as shown below.

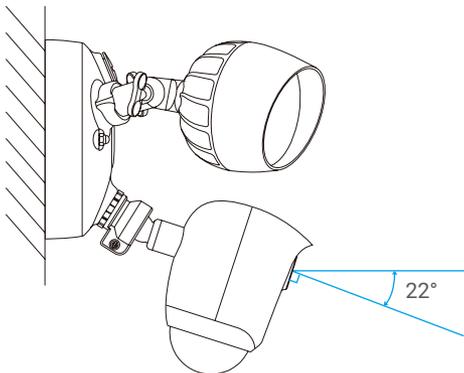


Step 1 Shut off the electricity at the breaker that controls security light's circuit.

- If you don't know where your breaker is or how to turn off power to your floodlight circuit, consult with a licensed electrician.
- Keep the breaker off at any time during the installation process.

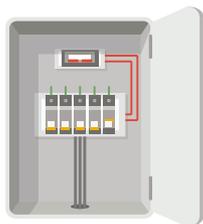

Step 2 Install Micro SD Card (Optional).


1. Remove the cover on the side of the camera.
2. Insert a micro SD card (sold separately) into the slot until a click.
3. Place the cover back on.

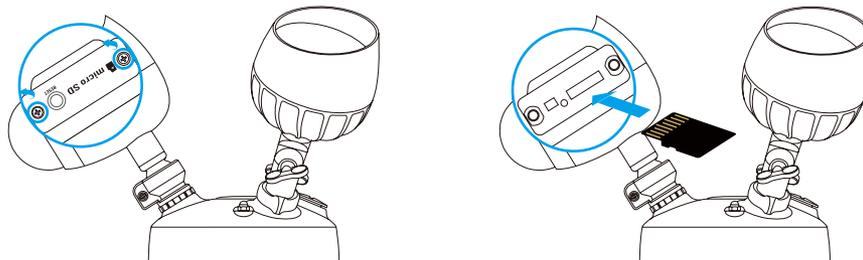


- After installing the micro SD card, you should initialize the card in the EZVIZ app before using it. For detailed operation, refer to page 5: [Initialize Micro SD Card](#).

Step 3 Separate the mounting bracket from the security light camera.

1. Unscrew the 2 base screw caps.
2. Pull the security light camera off the mounting bracket, and unplug the wire connector from the bracket.

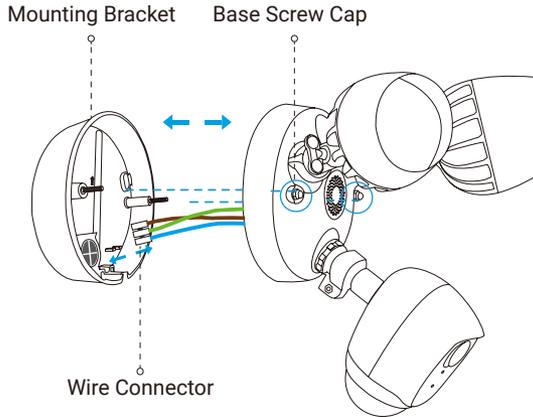

3. After separating the mounting bracket from the camera, the resulting picture is shown as below.

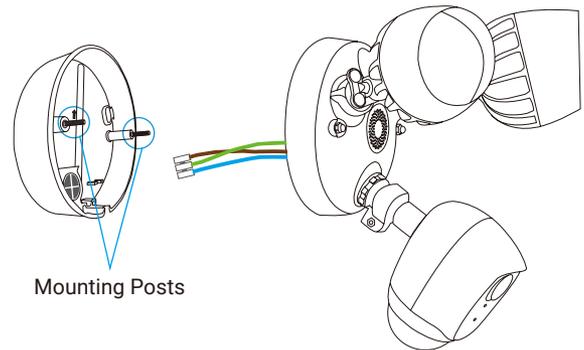



- Keep the mounting posts stay in the bracket.

Step 4 Install the mounting bracket.

- When installing the mounting bracket, make sure the logo (UP) faces upward.
- Make sure the wall/ceiling is strong enough to withstand three times the weight of the security light camera.

The security light camera can be mounted on the wall or ceiling. Here we take wall mounting as an example.

1. Pick a clean and flat surface.
2. Drill two holes on the wall and insert anchors.
3. Take the wires from the wall through the rubber of the mounting bracket.
4. Fix the mounting bracket to the wall with mounting screws.

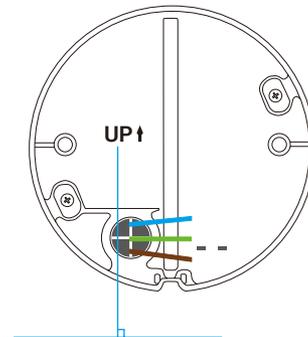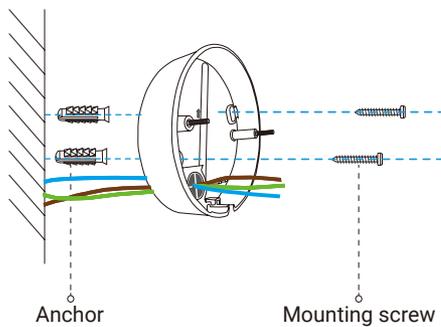


Step 5 Connect the wires.

Follow the steps to connect the wires from your wall to the wires on your security camera, as shown in the figure below.

1. Attach the ground (or yellow-green) wire from your wall to the yellow-green wire on your security light camera.
2. Attach the hot (or brown) and neutral (or blue) wires from your wall to the brown and blue wires on your security light camera respectively.
3. Secure them using screwdriver (sold separately).

Figure: Connect the Wires


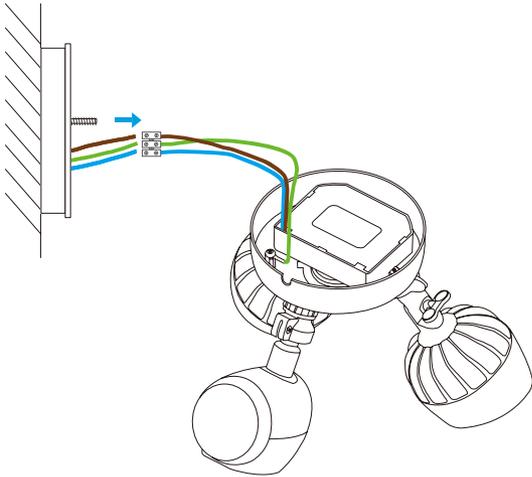


Wires from your wall
Yellow-green-Ground
Brown-Hot
Blue-Neutral

Connect to Matching Wire on Camera
Yellow-green
Brown
Blue


Step 6 Snap the wire connector into place.

After securing the wires, snap the wire connector into the base of the mounting bracket.

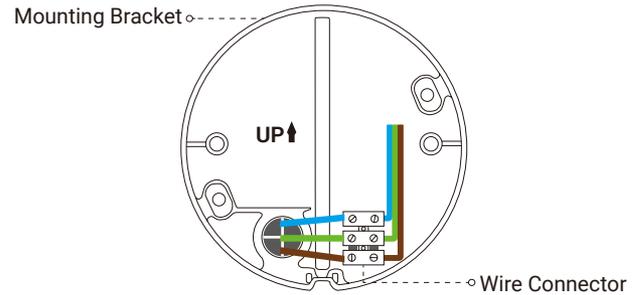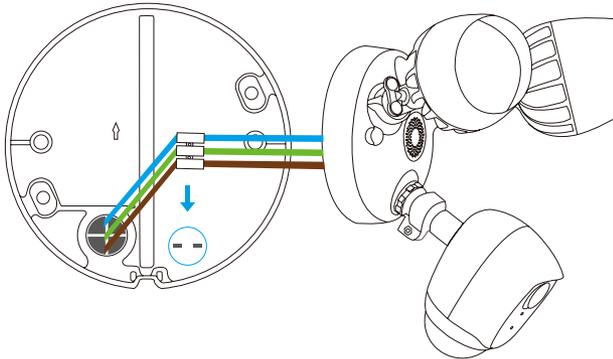


Step 7 Place security light camera on the bracket.

Align the mounting posts with the holes on security light camera and press together, securing the base screw caps.

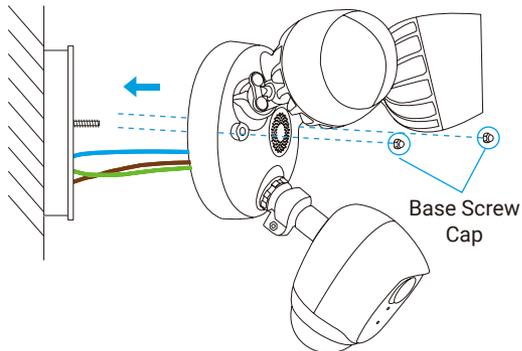


Step 8 Restore power at the breaker.

Turn on power to your security light's circuit.

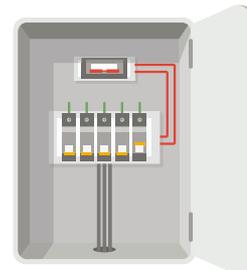

Step 9 Confirm the security light camera has power

- After restoring power, the security light camera will be ready for setup when the lights are on and the LED indicator on the front of the camera fast flashes blue.

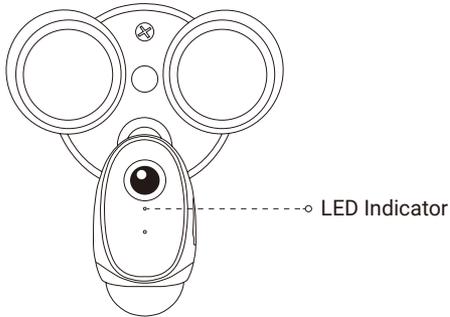

LED Indicator Status

Red


- Solid Red: Camera is starting up.
- Slow-flashing Red: Wi-Fi connection has failed.
- Fast-flashing Red: Camera exception (e.g. Micro SD card error).

Blue

- Solid Blue: Video is being viewed or played back in EZVIZ App.
- Slow-flashing Blue: Camera is running properly.
- Fast-flashing Blue: Camera is ready for Wi-Fi connection.

Add a security light camera to EZVIZ

- Log in the EZVIZ app.
- From the EZVIZ app Home screen, tap "+" on the upper-right hand corner to go to the scan QR code interface.

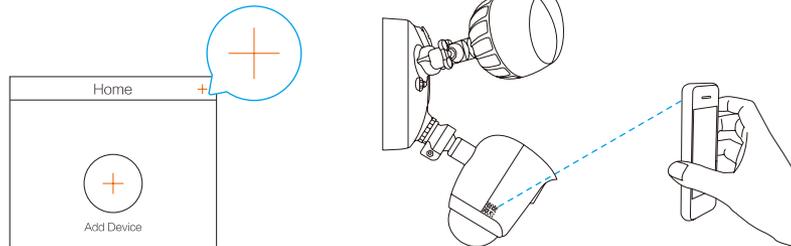

- Scan the QR Code on the security light camera.
- Follow the EZVIZ app wizard to finish Wi-Fi configuration.
 - If you want to change your security light camera's Wi-Fi, press and hold the reset button for 5s and repeat this part.
 - The security light camera works with 2.4GHz Wi-Fi signals. If you have a dual-band router with separate 2.4GHz and 5GHz networks, make sure your phone is connected to the 2.4GHz one.
 - If your Wi-Fi network signal is less than 50% where you want to install the security light camera, a Wi-Fi signal extender is recommended to boost the signal at the installation point.

Initialize Micro SD Card

- In the EZVIZ app, check the memory card status by tapping on the **Storage Status** in the Device Settings interface.



- If the memory card status displays as **Uninitialized**, tap to initialize it. The status will then change to **Normal**.

For detailed information, please visit www.ezviz.com/eu.

INFORMATION FOR PRIVATE HOUSEHOLDS

1. Separate collection of waste equipment: Electrical and electronic equipment that has become waste is referred to as waste equipment. Owners of waste equipment must dispose of it separately from unsorted municipal waste. In particular, waste equipment does not belong in household waste, but in special collection and return systems.
2. Batteries and rechargeable batteries as well as lamps: Owners of waste equipment shall, as a rule, separate waste batteries and rechargeable batteries that are not enclosed in the waste equipment, which can be removed from the waste equipment without being destroyed, from the waste equipment before handing them in at a collection point. This does not apply if waste equipment is prepared for reuse with the participation of a public waste management authority.
3. Options for returning waste equipment: Owners of waste equipment from private households can return it free of charge to the collection points of the public waste management authorities or to the take-back points set up by manufacturers or distributors within the meaning of the Electrical and Electronics Equipment Law. Stores with a sales area of at least 400 m² for electrical and electronic equipment and those grocery stores with a total sales area of at least 800 m² that offer electrical and electronic equipment several times a year or on a permanent basis and make it available in the market are required to take it back. This also applies in the case of distribution using means of distance communication, if the storage and shipping areas for electrical and electronic equipment are at least 400 m² or the total storage and shipping areas are at least 800 m². Distributors shall, in principle, ensure take-back by providing suitable return facilities at a reasonable distance from the respective end user. The possibility of returning waste equipment free of charge exists for distributors who are obliged to take it back, among other things, if a new similar device that essentially fulfills the same functions is delivered to an end user.
4. Privacy Notice: Waste equipment often contains sensitive personal data. This applies in particular to devices of information and telecommunications technology such as computers and smartphones. In your own interest, please note that each end user is responsible for deleting the data on the waste equipment to be disposed of.
5. Meaning of the symbol “crossed-out wheelee bin”: The symbol of a crossed-out wheelee bin regularly depicted on electrical and electronic equipment indicates that the respective device is to be collected separately from unsorted municipal waste at the end of its service life.